

RESETING ERROR LIGHTS ON YOUR GASLESS NAIL GUN

Error indication: Your nail gun has detected that something could be operating incorrectly, this signalled by the **Orange** flashing lights where the battery level indicator is. This is telling you to reset your nail gun so it can check if there is an error. The steps below will show you how to do this

STEP 1: Make sure the nailer is turned off, and that there are **no nails in the magazine**, that you have a charged battery, and that it is connected properly



Error indicator lights

STEP 3: Once the service button is exposed, you can now turn the nail gun on by holding the power button down for 3 seconds



Hold for 3 seconds

STEP 2: Peel up the corner of the control panel cover label (peel up on the side shown in the picture below) – once you've lifted it you should be able to see the **'RED'** Service Button



STEP 4: Once turned on you will see the two **'Orange'** fault lights flashing. To reset these hold down the 'Battery Indicator' button and the (now exposed) **'RED'** service button together for approx. 10 seconds at which point the **'Orange'** lights will stop flashing, and the gun is reset



STEP 5: Now reinsert the nails into the magazine and test fire the gun to ensure that reset has solved the error.

IF THE ORANGE ERROR LIGHTS COME BACK ON AFTER TEST FIRING PLEASE RETURN THE GUN TO A SERVICE AGENT FOR A THOROUGH INSPECTION