Definitions

Slide Control

For starting throttle, run and stop. Keeps the throttle partially open during starting and switches off the ignition to stop the engine.

2 Throttle Trigger Lockout

Must be depressed before the throttle trigger can be activated.

3 Starter Grip

The grip of the pull starter, for starting the engine.

4 Air Filter Cover

Covers and protects the air filter element.

5 Carburetor Adjusting Screw For setting idle speed.

6 Fuel Filler Cap

For closing the fuel tank.

7 Screw Plug

Seals filler opening for gearbox grease.

8 Muffler with Spark Arresting Screen

Muffler reduces exhaust noises and diverts exhaust gases away from operator.

Spark arresting screen is designed to reduce the risk of fire.

9 Drilling Spindle

For attaching the chuck or adapter to the power drill.

10 Padding

Helps cushion thigh against handle frame.

11 Choke Knob

Eases engine starting by enriching mixture.

12 Manual Fuel Pump

Provides additional fuel feed for a cold start.

13 Spark Plug Boot

Connects the spark plug with the ignition lead.

14 Throttle Trigger

Controls the speed of the engine.

15 Auger Brake Activating Lever

Lever for engaging and disengaging the auger brake.

Specifications

EPA / CEPA

The Emission Compliance Period referred to on the Emissions Compliance Label indicates the number of operating hours for which the engine has been shown to meet Federal emission requirements.

Category

A = 300 hours

B = 125 hours

C = 50 hours

CARB

The Emission Compliance Period used on the CARB-Air Index Label indicates the terms:

Extended = 300 hours Intermediate = 125 hours Moderate = 50 hours

Engine

STIHL single cylinder four-stroke engine with mixture lubrication

Displacement: 36.3 cc

(2.22 cu.in)

Bore: 43 mm (1.693 in) Stroke: 25 mm (0.984 in)

BT 130 25

Engine power to ISO 7293:

1.4 kW (1.88 bhp) at

8,500 rpm

Idle speed:

2,800 rpm

Cut-off speed: 9,500 rpm

Ignition System

Electronic (breakerless) magneto ignition

Spark plug (resistor

type): NGK CMR 6H

Electrode gap: 0.5 mm (0.020 in)

Fuel System

All position diaphragm carburetor with integral fuel pump

Fuel tank capacity: 0.53 I (17.9 fl.oz)

Drilling gear

Two-stage spur gear drive

Gear ratio: 47.5:1
Max. spindle speed: 200 rpm

Max. spindle speed: Max. torque at drilling

81 Nm (59.74 lbf. ft)

Lubrication:

STIHL gear lubricant for brushcutters

Weight

spindle:

Dry, without drilling tool 21.8 lbs (auger): (9.9 kg)

Dimensions

Length with handle 400 mm frame: (15.748 in)

Width with handle frame: 530 mm (20.866 in)

Height without drilling tool (auger):

365 mm (14.370 in)

Maintenance and Repairs

Users of this unit should carry out only the maintenance operations described in this manual. STIHL recommends that other repair work be performed only by authorized STIHL servicing dealers.

Except for the emissions control systems and parts, which are governed by the Federal Emission Control Warranty provided elsewhere in this manual. Warranty claims following repairs can be accepted only if the repair has been performed by an authorized STIHL servicing dealer using genuine STIHL replacement parts.

Genuine STIHL parts can be identified by the STIHL part number, the **STIHL** logo and, in some cases, by the STIHL parts symbol **S**. The symbol may appear alone on small parts.

For repairs of any component of this unit's air emissions control system, please refer to the air emissions systems warranty in this manual.

26 BT 130