Water Blaster (3000psi) - Instructions for Use



SAFETY FIRST

If you are collecting the equipment for someone else please make sure this sheet is given to the equipment user to read. This sheet should be given to the site supervisor if the equipment is being hired for commercial use so that the information is available to all users. Before starting any job, be sure to spend a few minutes planning and understanding the hazards and risks of the activity and determining how you will control them to prevent injury or damage.



 
Required Safety Equipment







Foot Protection



Clothing



Pre-Start Checks and Safety

- Maximum towing speed is 90km/hr
- Ensure fuel tank is full (straight petrol or diesel dependent on model)
- Engine oil is at correct level
- Check oil level in pump and reduction box
- Ensure adequate water supply is available
- Ensure suction filter is clean
- Avoid kinks in suction and delivery hoses
- Remove trailer unit from tow vehicle before use and place on jockey wheel / stand to keep level. Chock wheels if required.
- Never run machine without water
- Never spray at people or animals
- Never hold fingers or hands over high pressure nozzle
- Never spray directly onto live electrical equipment

Starting procedure

- Connect water hose to blaster storage tank
- 2. Unwind enough pressure hose from trailer unit to move around required area
- 3. Turn on water supply and allow storage tank to full
- 4. Leave water turned on
- 5. Turn on fuel supply
- 6. Adjust throttle to half throttle
- 7. For cold start:
 - o Petrol: Engage choke for cold start
 - o Diesel: Turn key to glow position and hold for 20 seconds
- Turn ignition switch and start
- Return throttle to idle position and allow to warm up

When Operating

- Adjust throttle to the full position
- Depress trigger on gun and commence cleaning
- Never allow machine to run out of water
- Never point spray gun at people

Stopping and After Use

- Switch off machine
- Turn off fuel
- Depress trigger on gun to allow the pressure to be released
- Disconnect all hoses and roll up

IFU-068 Revision 2