
Part No.505064100002

Rev: C Nov. 2022

# **Operation Manual**

## TB26J Plus/TB860J Plus

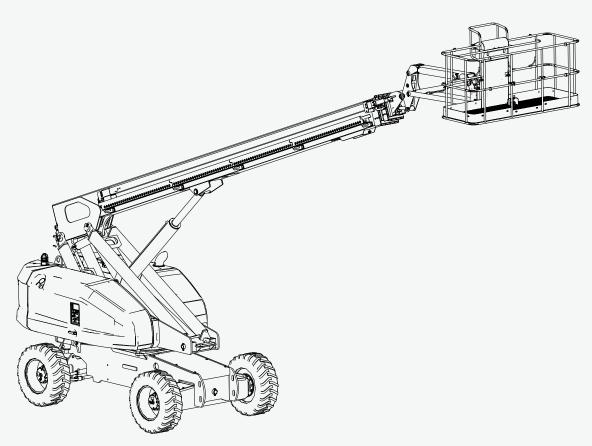





Operating, servicing and maintaining this vehicle or equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle or equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing. For more information go to: www.P65warnings.ca.gov.

For disposal, please follow your nation regulation.

## Manual revision history:

REV	DATE	DESCRIPTION	REMARK
Α	Apr, 2021	Original issue	
В	Jun, 2022	Revised manual, added information concerning Weichai engine and Yuchai engine etc.	
С	Nov. 2022	Updated manual, implemented the BS EN 280- 1:2022 standard requirements, revised the logic description of drive speed select switch etc.	

### Please contact us:

Website : www.sinoboom.com

E-mail : sales@sinoboom.com

Sales Tel : 0086-0731-87116222

Service Tel : 0086-0731-87116333

Address : No.128, East Jinzhou Avenue, Ningxiang High-tech Industrial Park, Changsha,

Hunan, China

Zip Code : 410600

Copyright © Hunan Sinoboom Intelligent Equipment Co., Ltd. All Rights Reserved

The final interpretation right of this manual belongs to Hunan Sinoboom Intelligent Equipment Co., Ltd.


## APPLICABLE RANGE

Use the following table to identify the specific serial number for models included in this manual. Check the model of your machine before consulting the manual, and then use the correct manual according to the serial number of the model. See the nameplate on your machine to identify the model and serial number. (See *Decals/Nameplate Inspection* of the *Operation Manual* for details.)

Madal	Trade Ide	le Identification	
Model M	Metric	Imperial	Serial No.
TB26J Plus	TB26J Plus	TB860J Plus	From 0506400252 to present

#### NOTE:

- Product model is applied in product nameplate for distinction of products of different main parameters.
- Product trade identification is applied in marketing and machine decals for distinction of products of
  different main parameters, and can be classified as metric type and imperial type: The metric trade
  identification is applicable to machines for countries/regions using metric system or as specially
  required by customers; The imperial trade identification is applicable to the machines for countries/
  regions using imperial system or as specially required by customers.



## **STATEMENTS**

Hunan Sinoboom Intelligent Equipment Co., Ltd. (Hereinafter referred to as Sinoboom) will upload the latest product manual information to the website <a href="https://www.sinoboom.com">www.sinoboom.com</a> as soon as possible. However, due to continuous product improvement, the information in this manual is subject to change without prior notice.

This manual covers the basic parts information of one or more products. Therefore, please use this manual according to your needs. If you find problems in the manual or have suggestions for improvement, feel free to share your feedback with Sinoboom, and we will address these issues as soon as possible.


Feel free to consult and download the *Operation Manual*, *Maintenance Manual* and *Parts Manual* of the products you need online at <a href="https://www.sinoboom.com">www.sinoboom.com</a>.

Hunan Sinoboom Intelligent Equipment Co., Ltd. retains the right of final interpretation of the manual.





All of the above are registered trademarks of Hunan Sinoboom Intelligent Equipment Co., Ltd..



## **TABLE OF CONTENTS**

In	troductioniii	6	Pre-operation Function Test 6-1
1	Machine Specifications 1-1		Preparing for a Pre-operation
2	Machine Components 2-1		Function Test6-1
3	Safety 3-1		Testing the Ground Controller
•	Safety Definitions 3-1		Testing the Platform Controller 6-8
	Reporting Accidents		Testing the Drive Speed6-15
	Electrocution Hazards		Testing the Emergency Lowering
	Tipping Hazards and Rated Load 3-2		Function6-15 Testing the Tilt Protection System6-16
	Jobsite Hazards		Testing the Envelope Restriction6-16
	Unsafe Operation Hazards3-6		Testing the Weighing System6-17
	Fall Hazards3-7	7	
	Collision Hazards 3-7	7	Operating the Machine 7-1
	Crush Hazards 3-8		Stability
	Explosion and Fire Hazards3-9		Emergency Stop
	Damaged Machine Hazards 3-9		Emergency Lowering
	Bodily Injury Hazards3-9		Emergency Towing/Dragging7-4
	Battery Hazards3-10		Operation from Ground
	Hydraulic Hazards3-12		Operation from Platform
	Welding and Polishing Requirements 3-12		Driving on a Slope7-7
	After Using the Machine3-12	8	Transporting and Lifting the
4	Jobsite Inspection 4-1	J	Machine 8-1
5	Pre-operation Inspection 5-1		
	Tips for Conducting a Pre-operation		Lifting the Machine with a Crane 8-2 Transporting the Machine 8-2
	Inspection5-1	_	· -
	Conducting a Pre-operation	9	Maintenance 9-1
	Inspection 5-2		Conducting a Pre-delivery Inspection . 9-2
	Inspecting Parts 5-2		Following a Maintenance Schedule 9-2
	Inspecting Entire Machine5-2		Completing a Repair & Inspection
	Inspect Hydraulic Oil Level		Report 9-3
	Inspecting Fuel Level		Major Modification and Repair Record 9-6
	Inspecting Engine Oil Level 5-4	10	•
	Inspecting Coolant Level (water-		Inspection10-1
	cooled engine )		Decals/Nameplate-GB10-2
	Inspecting the Battery 5-6		

Decals/Nameplate (CE-Metric) 10-5
Decals/Nameplate (CE-Imperial) 10-8
Decals/Nameplate (ANSI)10-11
Decals/Nameplates (CSA) 10-14
Decals/Nameplate (AS) 10-17
Appendix 1: Symbols and
DescriptionA-1
Appendix 2: Prepare the Work
Record Before Delivery A-3
Appendix 3: Repair & Inspection
Report A-5
Appendix 4: Major Modification

## INTRODUCTION

Thank you for choosing and using the machinery of Hunan Sinoboom Intelligent Equipment Co., Ltd. Always read, understand and become familiar with the operation requirements of the machine and its associated safety procedures before operating, maintaining and repairing the machine. Operating the machine without becoming familiar with its specific operation requirements and safety procedures poses serious risks. Operators who follow safety rules and operate the machine carefully and effectively will prevent personal injury, property loss and accidents.

Use this machine only to transport tools to work locations and for performing tasks on the work platform. Operators must be competent and must obtain training to carefully use the machine and follow safety procedures. Only trained and authorized personnel may operate the machine.

This manual guides the operator in operating and using the machine. The operator is responsible for reading, understanding and implementing the operation and safety procedures in this manual and for following the manufacturer's instructions before beginning any work. Read, understand and follow all safety rules and operating instructions. The operator must also consider the machine's uses and limitations and the conditions at the jobsite before using this machine. Strictly following all safety requirements in this manual is critical.

Consider this manual a part of the machine, along with *Maintenance Manual* and *Parts Manual*, and always keep the manuals with the machine. The owner or administrator of the machine shall offer all manuals and other necessary information provided by the machine manufacturer regarding the daily inspection and maintenance to each of the renters. If the machine is sold, the owner or administrator must pass along the manuals and other necessary information to the purchaser. The owner or administrator of the machine shall also provide the manufacturer's maintenance information to the person responsible for maintaining the machine.

If you have any questions, contact Hunan Sinoboom Intelligent Equipment Co., Ltd..



TB26J Plus Operation Manual

This Page Intentionally Left Blank

## **1** MACHINE SPECIFICATIONS

**Table 1-1 TB26J Plus specifications** 

MEASURE	TB26J Plus (METRIC)	TB860J Plus (IMPERIAL)	
	DIMENSION		
Max platform height	26.3m	86ft 3in	
Max working height	28.3m	92ft 10in	
Max horizontal reach (restricted/ unrestricted)	17.91m/20m	58ft 9in/65ft 7in	
Max horizontal working envelope (restricted/unrestricted)	18.51m/20.6m	60ft 9in/67ft 7in	
Overall length (stowed)	12.5m	41ft	
Overall length (transport)	10.25m	33ft 8in	
Overall width (stowed)	2.49m	8ft 2in	
Overall width (transport)	2.49m	8ft 2in	
Overall height (stowed)	2.88m	9ft 5in	
Overall height (transport)	2.96m	9ft 9in	
Wheelbase	3m	9ft 10in	
Ground clearance	0.46m	1ft 6in	
Tire size (spec/type)	Options 385/65-22.5 (foam-filled) 385/65-24/10 (solid) 15-625 (foam-filled)		
Platform dimension (L×W×H)	Options 1.45×0.85×1.1m 1.83×0.85×1.1m 2.44×0.91×1.1m	Options 4ft 9in×2ft 9in×3ft 7in 6ft×2ft 9in×3ft 7in 8ft×3ft×3ft 7in	
	PERFORMANCE		
Rated platform capacity (restricted/ unrestricted)	454kg/300kg	1,000lb/661lb	
Max number of occupants on platform (restricted/unrestricted)	3P/2P		
Turntable rotation/continuity	360°/continuous		
Platform rotation	160°		
Max drive speed (stowed)	4.8km/h	3mph	
Max drive speed (raised)	1.1km/h	0.68mph	
Drive mode (drive×steer)	4WD×2WS		
Gradeability	45%/24°		



Table 1-1 TB26J Plus specifications (continued)

MEASURE	TB26J Plus (METRIC)	TB860J Plus (IMPERIAL)		
Turntable tail-swing	1.45m 4ft 9in			
Max allowable inclination	5°			
Turning radius (inside)	3.65m 12ft			
Turning radius (outside)	6.91m	22ft 8in		
Max allowable side force	400N	90lbf		
Max operating noise level	82	dB		
IP rating	IP	65		
	POWER			
Engine (rated power/rated rpm/ spec/brand/emission standard)	54kW/2400rpm/QSF2.8t3TC72/Cummins/China Stage 3 55.4kW/2600rpm/TD2.9 L4/Deutz/Euro Stage 5 55.4kW/2600rpm/TD2.9 L4/Deutz/US Stage 4 55.4kW/2400rpm/TD2011 L04i/Deutz/US Stage 3 36.8kW/2500rpm/WP3.2G50E433/Weichai/China Stage 4 36.8kW/2200rpm/YCF3050-T420-3040G1/Yuchai/China Stage 4			
Hydraulic tank capacity	180 L	39.6gal (UK)/47.6gal (US)		
Oil Capacity of hydraulic tank	150 L	33.0 gal (UK)/39.6 gal (US)		
Fuel tank capacity	acity 160 L			
Hydraulic system pressure	Hydraulic system pressure 28MPa			
Battery (voltage, capacity)	12V, 220 Ah			
System voltage	12 VDC			
Control voltage	12 VDC			
GROUND BEARING DATA				
Max tire load 9,620kg 21,208		21,208 lb		
Pressure against ground	730kpa	105.9 Psi		
	ENVIRONMENT			
Max allowable wind speed	12.5m/s 28mph			
Max allowable altitude	1,000m 3,280ft			
Allowable ambient temperature -10°C ~ 40°C 14 (lead-acid battery)		14°F ~ 104°F		
Max allowable RH	90	%		
Storage environment	Stored at -20°C to 50°C (-4°F to 122°F) in a well-ventilated environment wit 90% relative humidity (20°C [68°F]), and away from rain, sun, corrosive gas, inflammables and explosives.			
WEIGHT				



#### Table 1-1 TB26J Plus specifications (continued)


MEASURE	TB26J Plus (METRIC)	TB860J Plus (IMPERIAL)	
Gross weight (unladen)	17,000kg	37,479lb	

#### Note:

- a) The platform height plus the operator height (taken as 2m/6ft 7in) is the working height.
- b) The ground bearing data is approximate value, not factoring different options, thus it serves only in adequately safe conditions
- c) In different areas, hydraulic oil, engine oil, coolant, fuel and lubrication should be added in accordance with the environmental temperature.
- d) In cold weather, auxiliary devices are needed to start the machines.
- e) Rated platform capacity refers to the rated load of the platform, including the loads of persons, materials, tools, platform accessories and other objects borne by the platform.
- f) The total vibration value of the platform does not exceed 2.5m/s², and the maximum root-mean-square value of the weighted acceleration of the entire machine does not exceed 0.5m/s².



### **TB26J Plus range of motion**

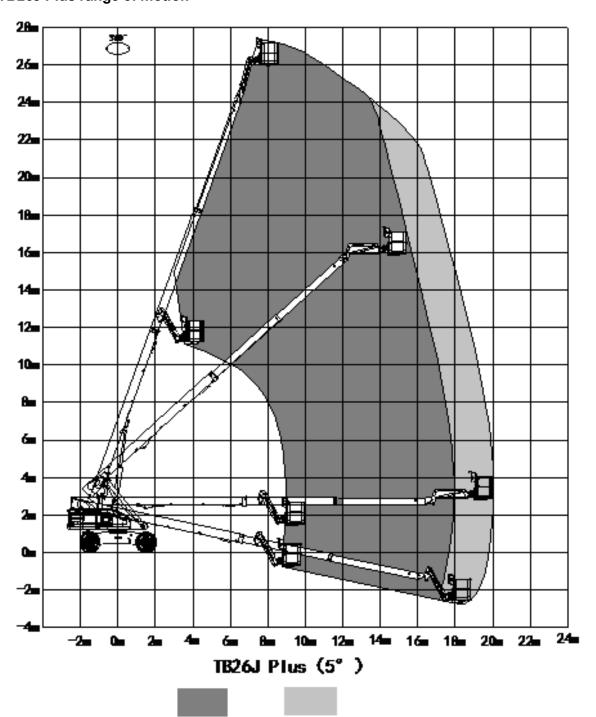

Restricted

Unrestricted

## 2 MACHINE COMPONENTS

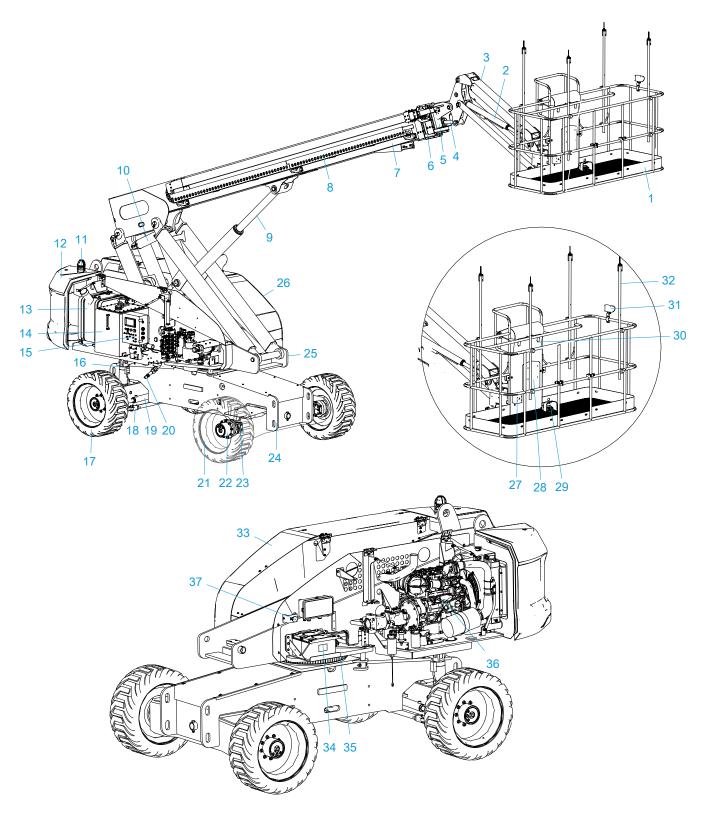


Figure 2-1



#### Table 2-1

1. Platform	14. Hydraulic tank	27. AC power receptacle (optional)	
2. Jib lift cylinder	15. Ground controller	28. Manual storage container (optional)	
3. Jib boom	16. Oscillate cylinder	29. Footswitch	
4. Slave cylinder	17. Front wheel	30. Plataform controller	
5. 2nd telescopic boom	18. Steer linkage	31. Work light (optional)	
6. 1st telescopic boom	19. Steer cylinder	32. Limit device (optional)	
7. Base boom	20. Power plug	33. Turntable cover, LH	
8. Cable track	21. Rear wheel	<b>34.</b> Battery	
9. Main lift cylinder	22. Drive reducer	<b>35.</b> Slewing bearing	
10. Master cylinder	23. Drive motor	36. Engine	
11. Flash beacon	24. Chassis	37. Power disconnect switch	
12. Counterweight	25. Turntable		
13. Fuel tank	26. Turntable cover, RH		

#### **Machine positions**

#### Stowed position:

Boom descends and retracts in place.

#### Non-operating position:

Boom rises at an angle not exceeding  $15^{\circ}$ , and extends not exceeding 1.2 m (3.9 ft).

#### Operating/raised position:

Boom rises at an angle exceeding 15°, or extends beyond 1.2m (3.9 ft).

## 3 SAFETY

Read, understand and comply with the safety rules and regulations of your workplace and your government.

Before using the machine, ensure the operator is properly trained and qualified in safely operating the machine. The training includes but is not limited to:

- Warning and instruction decals on the machine
- Pre-operation inspection
- · Any factors that may affect the machine stability
- · Common hazards and countermeasures
- Jobsite inspection
- Functions of all controls and associated knowledge, including emergency control.
- Personal protection equipment that suits the task, workplace and environment.
- Safety operation
- Transporting the machine
- Measures against unauthorized use
- · Operating instructions

Understand that as the operator you have the responsibility and right to shut down the machine in case of failure with the machine or other emergency at your workplace.

#### **NOTICE**

People suffering from heart disease, hypertension, epilepsy and other diseases and people who fear heights must never operate or use this machine. Also, people who have alcohol or drugs in their system, or experience excessive fatigue or depression, are prohibited from operating or using this machine.

## SAFETY DEFINITIONS



This safety alert symbol appears with most safety statements. It means attention, become alert, your safety is involved! Please read and abide by the message that follows the safety alert symbol.

### **A** DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

## **MARNING**

Indicates a hazardous situation that, if not avoided, *could* result in death or serious injury.

## **CAUTION**

Indicates a hazardous situation that, if not avoided, *could* result in minor or moderate injury.

#### NOTICE

Indicates a situation that can cause damage to the engine, personal property and/or the environment, or cause the equipment to operate improperly.

**NOTE:** Indicates a procedure, practice or condition that should be followed in order for the engine or component to function in the manner intended.

## REPORTING ACCIDENTS

In case of any accident involving the machinery of Hunan Sinoboom Intelligent Equipment Co., Ltd., notify Hunan Sinoboom Intelligent Equipment Co., Ltd. Immediately, even if no personal injury or property damage occurs during the accident. Contact Hunan Sinoboom Intelligent Equipment Co., Ltd. by telephone and provide all necessary details. Failure to notify the manufacturer within 48 hours of the incident involving the machinery of Hunan Sinoboom Intelligent Equipment Co., Ltd. may void the product's warranty.

#### NOTICE

Thoroughly inspect the machine and all its functions after any accident, being sure to test first from the ground controller and then from the platform controller. Ensure the machine's lifting height does not exceed 3 m(9.8 ft) until all damage has been repaired and all controllers operate properly.



## ELECTROCUTION HAZARDS

**NOTE:** This machine is not insulated and does not have an electric shock protection function.

All operators and managers shall comply with national or local regulations regarding the minimum safe distance of live conductors above the ground. In the absence of such requirements, operators and managers should follow the minimum safety distance requirements in *Table 3-1 Minimum Safe Distance*, page 3-2.


## **MARNING**

#### **ELECTRICAL SHOCK HAZARDS**



 Always maintain a safe distance from power lines and electrical equipment in accordance with applicable government regulations and see Table 3-1 Minimum Safe Distance, page 3-2.



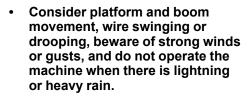



- If the machine comes into contact with live wires, keep away from the machine. Personnel on the ground or on the platform must not touch or operate the machine until the power is switched off.
- Do not use the machine as a ground wire during welding and polishing operations.

**Table 3-1 Minimum Safe Distance** 

Voltage (Phase to Phase, kV)	Minimum Safe Distance (m/ft)
0-50	3.05 (10)
50-200	4.60 (15)
200-350	6.10 (20)
350 -500	7.62 (25)
500 -750	10.67 (35)
750 -1000	13.725 (45)

## TIPPING HAZARDS AND RATED LOAD

Maximum rated load bearing capacity of the platform:

Table 3-2

TB26J Plus		
Metric	300kg (unrestricted / 2 persons & tools) 454kg (restricted / 3 persons & tools)	
Imperial	661 lb (unrestricted / 2 persons & tools) 1000 lb (restricted / 3 persons & tools)	




#### **TIPPING HAZARDS**




山)))

- Personnel, equipment and materials on the platform must not exceed the maximum platform capacity.
- Only raise or extend the boom when the machine is on solid, level ground.
- Select only the low speed when driving the machine on a slope.
- Do not use the tilt alarm as a level indicator. The tilt alarm on the platform will sound only if the machine is heavily tilted.

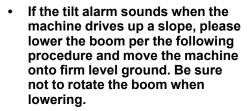



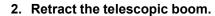

- If the tilt alarm sounds when the machine drives down a slope, please lower the boom per the following procedure and move the machine onto firm level ground. Be sure not to rotate the boom when lowering.
  - 1. Retract the telescopic boom;
  - 2. Lower the main boom.
- Do not drive faster than 1.1 km/h (0.68 mph) when the platform is raised.
- When the platform is raised, the machine cannot travel on uneven terrain, unstable surfaces or in other dangerous conditions.
- Do not operate the machine during strong winds or gusts, and do not increase the surface area of the platform or load. Increasing the area exposed to the wind will reduce the stability of the machine.
- When the machine is on rough ground, with gravel or other uneven surfaces, or near holes and steep slopes, maintain a minimum distance of 0.6m (2ft) and reduce the speed.

## **WARNING**

#### **TIPPING HAZARDS**

- When on the platform do not push and pull objects outside of it. The maximum side force allowed is 400N (90 lbf).
- Tow the machine only from the tiedown/lifting points on the chassis.
- Never use the boom or platform to stabilize or support any objects outside of the machine.
- Do not change any machine parts that may affect safety and stability.
- Do not replace key parts that affect machine stability with parts of different weights or specifications.
- Do not modify or change the moving aerial platforms without the manufacturer's prior written permission.
- On the platform, do not attach an additional device for placing tools or other materials to the guardrail. This will increase the platform weight, surface area and load.
- Do not place on, or fasten any overhanging load to any part of this machine.
- Do not place ladders or scaffolding on the platform or any parts of the machine.
- Do not use the machine on a moving or active surface or on a vehicle. Ensure all tires are in good condition, the slotted nuts tightened and the cotter pins complete.
- Do not use a battery that weighs less than the original one (26kg [57 lb]), and do not remove or modify the counterweight or other parts of the battery box. The battery not only provides power, but also serves as a counterweight. The battery is vital to maintaining the stability of the machine.
- Do not use the platform or boom assembly to push other machines or objects.





#### **TIPPING HAZARDS**

- Do not let the platform or boom assembly touch the nearby structures.
- Do not tie off the platform with rope or other binding materials to the nearby structures.
- Do not put a load outside the platform.
- When the platform is caught or stuck or when other objects in the vicinity impede its normal movement, do not use the platform controller to lower the platform. If you intend to lower the platform with the ground controller, you must operate it only after all personnel have left the platform.

### JOBSITE HAZARDS

## **WARNING**

#### **JOBSITE HAZARDS**



Do not operate the machine on surfaces, edges or potholes that cannot bear the weight of the machine. Raise or extend the boom only when the machine is on firm, flat ground.



Never travel on uneven terrain or unstable surfaces or in other dangerous conditions when raising the platform.



 When the machine is on rough ground, with gravel or other uneven surfaces, or near holes and steep slopes, maintain a minimum distance of 0.6m (2ft) and reduce the speed.



Do not use the tilt alarm as a horizontal indicator. The tilt alarm on the platform will sound only when the machine is heavily tilted.



- If the tilt alarm sounds when the machine drives up a slope, lower the boom per the following procedure and move the machine onto firm level ground. Be sure not to rotate the boom while lowering.
  - 1. Lower the main boom;



2. Retract the telescopic boom.



- If the tilt alarm sounds when the machine drives down a slope, lower the boom per the following procedure and move the machine onto firm level ground. Be sure not to rotate the boom while lowering.
  - 1. Retract the telescopic boom;
  - 2. Lower the main boom.
- Running speed should not exceed 1.1km/h (0.68 mph) when the platform rises.
- If the machine can be used outdoors, never operate it during strong winds or gusts. Do not lift the platform when the wind speed exceeds 12.5 m/s (28 mph). If the wind speed increases to beyond 12.5 m/s (28 mph) after the



#### **JOBSITE HAZARDS**

platform is lifted, fold the platform and stop operating the machine.

- Do not use any device that may increase the wind load on the machine.
- Do not drive or lift the machine on slopes, steps or vaulted surfaces that exceed the maximum gradeability of the machine.

Before or during machine operation, check the jobsite for possible hazards and pay attention to the environmental restrictions, including flammable and explosive gas/dust. If the machine is to be used in any other applications, or by any other means, other than those specified by **Sinoboom**, it must be approved or guided by the manufacturer.

Table 3-3

BEAUFORT NUMBER	METERS/ SECOND	MILE/ HOUR	DESCRIPTI- ON	GROUND CONDITION
0	0~0.2	0~0.5	Calm	Calm. Smoke rises vertically.
1	0.3 ~ 1.5	1~3	Light air	Wind motion visible in smoke.
2	1.6 ~ 3.3	4~7	Light breeze	Wind felt on exposed skin. Leaves rustle.
3	3.4~5.4	8 ~ 12	Gentle breeze	Leaves and smaller twigs in constant motion.
4	5.5~7.9	13 ~ 18	Moderate breeze	Dust and loose paper rise. Small branches begin to move.
5	8.0 ~ 10.7	19~24	Fresh breeze	Smaller trees sway.
6	10.8 ~ 13.8	25 ~ 31	Strong breeze	Large branches in motion. Flags waving near horizontal. Umbrella use becomes difficult.
7	13.9 ~ 17.1	32~38	Near gale/ moderate gale	Whole trees in motion. Effort needed to walk against the wind.
8	17.2 ~ 20.7	39~46	Fresh gale	Twigs broken from trees. Cars veer on road.
9	20.8 ~ 24.4	47 ~ 54	Strong gale	Light structure damage.

#### **NOTICE**

Maximum gradeability is applicable for machines with platform retracted.


Gradeability means the maximum allowable tilt angle of the machine when it is on solid ground and the platform is only capable of carrying one person. As the weight of the machine's platform increases, the machine's climbing capacity reduces.

Maximum gradeability:



Uphill: 45%/24°



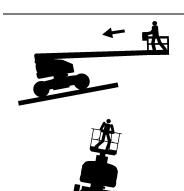

Downhill: 30%/17°

Side slope: 25%/14°

## UNSAFE OPERATION HAZARDS

At a minimum, operators must operate and maintain the machine as stated in the *Operation Manual* and the *Maintenance Manual* in addition to following more stringent industry regulations and workplace rules. Never engage in unsafe machine operation.

Do not use the machine in the following situations:

- Unrelated personnel/equipment is present in the working envelope of the machine.
- Use as a crane (except the custom-made ones with such functions).
- Use on the truck, trailer, tracked vehicle, ship, scaffold and the like without written consent by the manufacturer or a qualified professional.
- Improper securing of the machine to another object by just leading, fastening or binding.
- · Stunt or imprudent use of the machine.
- Overloaded or over-moment situation.
- Other prohibited situations as specified in the Operation Manual and Maintenance Manual.

## **WARNING**

#### **UNSAFE OPERATION HAZARDS**



Do not push any object outside the platform. The maximum side force allowed is 400N (90lbf).



- Tow the machine only from the tie-down/lifting points on the chassis.
- Never use the boom or platform to stabilize or support any objects outside of the machine.
- Do not modify any component that may affect the machine safety and stability.
- Do not replace key parts that affect machine stability with the ones of different weights or specifications.



- Do not change or modify the machine without the manufacturer's written permission.
- On the platform, do not attach an additional device for placing tools or other materials to the guardrail. This will increase the platform weight, surface area and load.



- Do not put ladders or scaffolding on the platform or any part of this machine.
- Do not use additional devices to increase the working height of the machine.
- Do not use the machine on any mobile or movable surface or vehicle. Ensure all tires are in good condition, the slotted nuts tightened and the cotter pins complete.
- Do not use a battery that weighs less than the original one (26kg [57lb]), and do not remove or modify the counterweight or other parts inside the battery box. The battery not only provides power, but also serves as a counterweight. The battery is vital to maintaining the stability of the machine.



#### **UNSAFE OPERATION HAZARDS**

- Do not place or attach any suspended load onto any part of the machine.
- Do not use the machine as a crane.
- Do not use the platform to push the machine or other objects.
- Do not allow the platform or boom to touch nearby structures.
- Do not use ropes or other binding materials to tie the platform or boom onto nearby structures.
- Do not put the load outside the platform.
- When the platform is caught or stuck or when other objects in the vicinity impede its normal movement, do not use the platform controller to lower the platform. If you intend to lower the platform with the ground controller, you must operate it only after all personnel have left the platform.
- When one or more of the machine's tires are off the ground, evacuate all personnel before attempting to stabilize the equipment. Use a crane, forklift or other suitable equipment to stabilize the machine.


## **FALL HAZARDS**

At a minimum, operators must operate and maintain the machine as stated in the operation manual and in the maintenance manual in addition to following more stringent industry regulations and workplace rules.

## **MARNING**

#### **FALL HAZARDS**



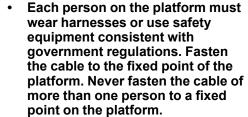



 Do not sit, stand or crawl on the guardrails. When on the platform always remain standing on the platform floor.



- Do not enter or exit the platform through the boom.
- Keep the platform floor free of obstacles.
- Do not allow mud, oil stains, grease or other slippery substances reside on the footwear or platform floor.
- Do not enter or exit the platform unless the machine is fully in stowed position.
- Close the platform entrance door before operating the machine.
- Do not operate the machine if the handrails are not properly installed and the platform entry door is not closed.

## **COLLISION HAZARDS**

At a minimum, operators must operate and maintain the machine as stated in *Operation Manual* and in the *Maintenance Manual* in addition to following more stringent industry regulations and workplace rules.



## **⚠** WARNING

#### **COLLISION HAZARDS**



- Pay attention to the field of sight and the presence of blind spots when moving or operating the machine.
- Persons except the operator must maintain a distance of at least 1.8m (5.9ft) from the machine while it is travelling or swinging.



- When the work platform of a moving machine is approx. 2m (6.6ft) away from the obstructions, elevate or lower the work platform, rather than directly driving towards the obstructions.
- Switch to the low speed gear before parking the machine that drives at high speed.



- Do not engage the high speed gear when the machine is driving reverse or in restricted or enclosed work area.
- Check the work area to avoid ground and overhead obstructions or other possible risks.
- Be sure to exercise caution when using the platform controller and ground controller. Color-marked directional arrows indicate the functions of travel, lift/lower and steering.
- Users must comply with user, workplace and government rules regarding the use of personal protective equipment (hard hats, safety belts and gloves, etc.).
- Place the machine on level ground or in a secured position before releasing the brake.
- Ensure no people or obstructions are beneath the platform before lowering it.
- When the machine is conducting aerial work, warn the operator/ other people not to work, stand or walk under the raised boom or platform. Set up roadblocks if necessary.
- Limit the speed of travel according to ground conditions, crowding, gradients, the presence and location of personnel and any

### **↑** WARNING

#### **COLLISION HAZARDS**

other factors that may cause collisions.

- Do not operate the machine on the route of any crane or overhead traveling device unless the crane control is locked or precautions have been taken to prevent any potential collision.
- Keep the machine away from any stationary objects (buildings etc.) or mobile objects (vehicles, cranes etc.).
- Never operate a machine in a dangerous way or for fun.

### CRUSH HAZARDS

A potential crush hazard exists during movement of the machine. Always keep body parts and clothing a safe distance from the machine during machine operation.

## **↑** WARNING

#### **CRUSH HAZARDS**



- Do not place your hands and arms where they may become crushed or trapped.
- Do not work under the platform or the boom when the boom is not protected by a crane.
- Maintain good judgment and planning when using the controller on the ground to operate the machine. Maintain proper distance between operator, machine and fixed object.



## EXPLOSION AND FIRE HAZARDS

## **WARNING**

#### **EXPLOSION AND FIRE HAZARDS**



 Do not use the machine or charge the battery in hazardous or potentially flammable or explosive atmosphere.



- For the engine-powered machines, never add fuel while the engine is still running, and only add fuel when the place is well ventilated and free of flame, spark or any other hazards that may cause explosion.
- Never spray ether on the engine equipped with glow plug.

## DAMAGED MACHINE HAZARDS

#### NOTICE

To avoid machine damage, follow all operation and maintenance requirements in the Operation Manual and the Maintenance Manual.

## **⚠** WARNING

#### **DAMAGED MACHINE HAZARDS**



- Do not use the machine if it is damaged or not in proper operating condition.
- Thoroughly inspect and test for all functions of the machine before use. Immediately stop and mark damaged or faulty machines and then contact the manufacturer.
- Ensure that all maintenance operations have been performed in accordance with the Operation Manual and the Maintenance Manual.
- Make sure all labels are in place and are legible.
- Ensure that the Operation Manual and Maintenance Manual are sound, easy to read and stored in the storage compartment on the platform.

## **BODILY INJURY HAZARDS**

Always follow all operation and maintenance requirements in this manual and the Maintenance Manual.

## **WARNING**

#### **BODILY INJURY HAZARDS**



- Do not operate the machine when there are oil spills/leaks. Oil spills or leaks in hydraulic fluids may penetrate and burn the skin.
- Always operate the machine in well ventilated atmosphere to prevent carbon monoxide poisoning.

**NOTE:** The operator must carry out maintenance during the pre-operation inspection only. During operation, keep the left and right doors of the chassis closed and locked. Only trained service personnel can open the left and right doors to repair the machine.



### **BATTERY HAZARDS**

## **MARNING**

#### FIRE AND EXPLOSION HAZARD



 Batteries contain sulfuric acid and may generate explosive mixtures of hydrogen and oxygen gases. Keep any device that may produce sparks or flames (including cigarettes/smoking materials) away from the battery to prevent explosion.



- Do not touch the battery terminals or cable clips with tools that may produce sparks.
- Do not charge the battery under direct sunlight.
- The battery should be charged in a well-ventilated site.
- Should the battery overheat, deform, leak, smell or smoke during service, stop using the battery immediately and place it in an open area far away from the crowd.
- Do not throw the battery to a fire or heater.

## **WARNING**

#### **ELECTROCUTION HAZARD**



 Contact with hot circuit may cause serious injury or death. Be sure to wear goggles, gloves and protective clothing.



 Remove all rings, watches and other accessories.

## **WARNING**

#### **CHEMICAL BURN HAZARD**



- Avoid battery acid spilling or contacting unprotected skin.
   Wash the skin with plenty of water and seek medical attention immediately if battery acid contacts skin.
- If the battery acid escapes, please use baking soda to neutralize the acid.



#### **UNSAFE OPERATION HAZARD**



 Strictly follow the manufacturer's recommendations on how to properly use and maintain the battery.



- The battery charger can only be connected to 3-phase AC outlet, and ensure the charger works properly before charging.
- Only use the charger provided by the manufacturer.
- The battery is only applicable for the matching equipment, so do not use it otherwise.
- Only the properly trained personnel authorized by the workplace are allowed to remove the battery from the machine.
- Before replacing the battery, be sure to identify the appropriate number of personnel and the lifting method.
- The wrapping of the battery is prone to becoming damaged by pointed objects, so do not use a pointed part to collide with the battery.
- Do not place other objects or tools upon the battery to avoid short circuit.
- Always keep the battery vertically placed. If tiltedly placed, the battery acid may escape.
- Never short circuit the battery positive and negative poles.
- Do not use the battery positive and negative conversely.
- Do not connect the battery directly to a power outlet.
- Do not tap, throw or step on the battery.
- Do not immerse the battery under water, acid or alkaline solution with salt, and do not expose the battery to the rain.
- Do not tamper with battery system to avoid serious accident.
- Cut off the battery main switch if the battery is not to be used for an extended period.

## **WARNING**

#### **UNSAFE OPERATION HAZARD**

- The waste battery may pose danger, so do not discard at will. If it needs to be scrapped, contact a battery recycling company.
- Except for the professionals, do not perform a systematic maintenance or service to the battery, otherwise it may cause bodily injuries or damage to the battery system.
- Except for the professionals, do not tamper with the settings or service a signal light when the system is running, otherwise it may cause bodily injuries or damage to the battery system.
- Except for the professionals, do not remove the battery housing, otherwise it may cause damage to the battery system.

#### NOTICE

It will not covered by the warranty if the battery attenuates or fails due to customer's overuse (-continued use after battery level less than 10%) or failure to charge the battery for a long time (not timely charged for 3 days or longer when the battery level less than 10%).



### **HYDRAULIC HAZARDS**

## **MARNING**

#### **BURN AND SPRAY HAZARDS**



 When the hydraulic system is hot, do not touch to avoid severe skin burn.



- After the machine shutdown, thoroughly clean the spilled hydraulic oil. Do not throw the oil on the ground. Once the maintenance and repair is complete, immediately clean any oil on the skin, Dispose of the used oil as per the governing laws and regulations.
- Do not use your hand to block the hydraulic leaks. If the leakage occurs, please first release the system pressure and maintain only after the hydraulic oil cools down. If any injury is caused by the spray of hydraulic oil, go to the doctor immediately, otherwise severe complication may develop.

## WELDING AND POLISHING REQUIREMENTS

Before welding, grinding and polishing operations, always ensure you read and understand all operation and maintenance requirements in the *Operation Manual* and the *Maintenance Manual*.

## **WARNING**

#### **WELDING HAZARDS**



- Comply with the welder manufacturer's recommendations for procedures concerning proper use of the welder.
- Welding leads or cables may only be connected after turning off the power unit.
- Carry out welding operations only after the welding cable has been correctly connected.
- Do not use the machine as a ground wire during welding operation.
- At all times, make sure that the power tools are completely stored in the working platform. Do not hang the power tools on the railing of the working platform or the work area outside the working platform, or hang the power tools directly by the wire.

Before performing welding, grinding and polishing work, welders must seek permission of the responsible department at the workplace.

## AFTER USING THE MACHINE

- 1. Choose a safe parking location that is on sturdy, level ground and that is free of obstructions. Avoid areas with heavy traffic.
- 2. Lower the boom to stowed position.
- **3.** Take off all loads from the platform and run the enghine at low speed for 3–5 minutes to reduce the engine inside temperature.
- **4.** Push in the emergency stop button at the platform controls to the OFF position.
- Close the cover of platform controls to protect the control panel, handle and controller from hostile weather conditions.
- **6.** Push in the emergency stop button at ground controls to the OFF position.
- 7. Turn the key switch at the ground controls to OFF position and remove the key to avoid unauthorized operation of the machine.
- 8. Turn off the main power switch.



## **NOTICE**

After using the machine, the main power switch must be disconnected.



This Page Intentionally Left Blank

4 JOBSITE INSPECTION

## **WARNING**

#### **UNSAFE OPERATION HAZARD**



Be sure to follow the instructions and safety rules in this manual. Failure to follow the instructions and safety rules in this manual may result in death or serious injury.

Do not operate this machine unless you have learned and practiced the rules for safely operating the machine as stated in this manual.

- Know and understand the safety rules before continuing the next step.
- · Avoid dangerous situations.
- Always check the machine before operating.
- Select appropriate machinery and personal protective equipment (hard hats, safety belt and gloves, etc.) for the task.
- Always perform a pre-operation function test before using the machine.
- Check the work site.
- Check the safety decals/ nameplate on the machine.
- Only use the machine according to the instructions in this manual and for its intended purpose.

During the jobsite inspection the operator determines whether the jobsite is suitable for safe machine operation. The operator should conduct the jobsite inspection before moving the machine to the jobsite.

Safety is the operator's responsibility. Part of safety is conducting a thorough jobsite inspection. Operators must identify and avoid workplace hazards when moving, installing and operating the machine.

Unless approved by Sinoboom, never operate the machine in a hazardous site. The following items present danger on the jobsite:

- Steep hills or caves
- Ground prominences, obstacles or debris
- Ground inclines

- · Unstable or ultra-smooth surfaces
- Overhead obstacles and high-voltage wires
- Hazardous locations
- Ground surface that could fail to support the capacity of the machine and its load
- Gusts and strong winds
- Actions by unauthorized personnel
- Other possible unsafe conditions



This Page Intentionally Left Blank

## 5 PRE-OPERATION INSPECTION

## **WARNING**

#### **UNSAFE OPERATION HAZARD**



Be sure to follow the instructions and safety rules in this manual. Failure to follow the instructions and safety rules in this manual may result in death or serious injury.

Do not operate this machine unless you have learned and practiced the rules for safely operating the machine as stated in this manual.

- Know and understand the safety rules before continuing the next step.
- Avoid dangerous situations.
- Always check the machine before operating.
- Select appropriate machinery and personal protective equipment (hard hats, safety belt and gloves, etc.) for the task.
- Always perform a pre-operation function test before using the machine.
- · Check the work site.
- Check the safety decals/ nameplates on the machine.
- Only use the machine according to the instructions in this manual and for its intended purpose.

Before operating the machine, please first understand the tasks to be done and be aware of the following:

- **1.** Be familiar with each function of the machine and capable of operating it adeptly.
- **2.** Only the person authorized by the management is allowed to operate the machine.
- **3.** Obey the safety rules in this manual, and fully understand and follow the operating instructions in this manual to operate the machine.
- 4. The operator should go through a professional training based on this operation manual, and should be certified as a qualified operator in operation of this machine.

- **5.** Clearly understand all nameplates, warning and safety decals on the machine.
- 6. Before each operation, examine and check the operational environment, and ensure the safety protection equipment is properly in place. The safety equipment may differ according to the operational environment.
- Before operating the machine, be sure that all control handles are returned to neutral, and all switches in the OFF position.

# TIPS FOR CONDUCTING A PRE-OPERATION INSPECTION

## **WARNING**

#### **TIPPING HAZARD**



Do not change or modify the aerial work platform without the prior written permission of the manufacturer. If an additional device is installed on the platform or guardrail for placing tools or other materials, this will increase the platform weight and surface area or increase the load.

- The operator is responsible for performing the "preoperation inspection" and routine maintenance as stated in this manual.
- Before each shift change, the operator must conduct a pre-operation inspection to find out whether the machine has obvious problems before the operator performs a pre-operation function test.
- The pre-operation inspection also helps the operator determine whether the machine requires routine maintenance. The operator can only perform the routine maintenance items as stated in this manual.
- Please refer to *Inspecting Parts*, *page 5-2* and check each item.
- Never use a machine that has damaged or modified parts. Mark the machine and stop using the machine if you discover damage or modifications.

#### PRE-OPERATION INSPECTION

SINOBOOM

- Only qualified maintenance technicians can repair the machine according to the manufacturer's regulations. After any maintenance, the operator must perform another pre-operation inspection before conducting a pre-operation function test.
- Qualified maintenance technicians must perform regular maintenance inspections according to the requirements in the manufacturer's Maintenance Manual.

## CONDUCTING A PRE-OPERATION INSPECTION

Before starting the machine, check whether it meets the following requirements:

- Ensure the *Operation Manual* and *Maintenance Manual* are in good condition, legible and stored in the storage compartment on the platform.
- Make sure all labels are legible and appropriately located.
- Check for hydraulic oil leaks and proper oil level.
   Add oil as needed. See *Inspect Hydraulic Oil Level*, page 5-2.
- Check for diesel fuel leaks and proper fuel level.
   Add fuel as needed. See *Inspecting Fuel Level*, page 5-3.
- Check for proper engine oil level. Add engine oil as needed. See *Inspecting Engine Oil Level, page 5-*
- Check for proper coolant level. Add coolant as needed. See *Inspecting Coolant Level* ( water-cooled engine ) , page 5-5.
- Check battery for leaks and proper liquid level. Add distilled water as needed. See *Inspecting the* Battery, page 5-6.
- Check whether the protective device in use matches the type of work performed and conforms to relevant technical standards.

## **INSPECTING PARTS**

Before each use or work shift, check the machine for any damaged, improperly installed, loose or lost parts and unauthorized changes:

- Electrical components, wiring, cables and safety rope
- Hydraulic hoses & fittings, hydraulic cylinder and manifolds
- Fuel tank and hydraulic tank

- Storage battery pack and its connection
- Drive motor & reducer, slewing motor & reducer
- Boom wear pads and telescopic axle wear pads
- Limit switch and horn
- · Tires and rims
- · Engine and associated parts
- · Alarms and lighting (if equipped)
- Platform (including rails, floor plate, safety lock, brackets and entry door)
- Personal protection equipment
- · Emergency control equipment
- Operation instructions, warning and control decals
- · Structure and welding cracks
- · Nuts, bolts and other fasteners

#### NOTICE

If damaged parts, incorrect installation or missing parts are discovered, please replace immediately and install correctly; if the fasteners are found detached or loose, please secure immediately.

## INSPECTING ENTIRE MACHINE

Inspect the entire machine for:

- · Cracks in a weld joint or structural part
- · Dents or other damage
- Severe rust, corrosion or oxidation
- Improper twisting of steel wire ropes, electric cables, hoses inside the platform
- Missing or loose structural parts and key components, including fasteners and pins for correct positioning and tightness
- After the inspection, ensure all covers are in place and securely locked

## INSPECT HYDRAULIC OIL LEVEL

Ensuring appropriate hydraulic oil level is vital to proper operation of the machine. If too high, the oil will spill out from the oil tank during machine operation, if too low, the oil pump will suction air and damage hydraulic components. Performing daily inspection of the



hydraulic oil level will help you determine if a problem exists in the hydraulic system.

Perform the following procedures with the boom in stowed position:

 Open the left turntable cover to make visual inspection of the sides of hydraulic tank, the hydraulic oil level should be within the marking range of oil level indicator.

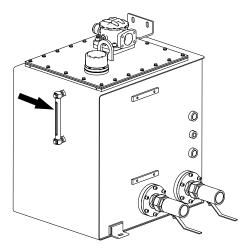


Figure 5-1

- 2. Ensure the hydraulic tank body and its connections are free of leaks.
- 3. Add oil as needed. Never overfill the tank.

Table 5-1

CUSTOMER REQUIREMENTS	HYDRAULIC OIL MARK
Normal-temperature region 0°C to 40°C (32°F to 104°F)	L-HM46
Cold region -25°C to 25°C (-13°F to 77° F)	L-HV32
High-temperature region greater than 40°C (104°F)	L-HM68
Extremely cold region less than -30°C (-22°F)	Special programmes need to be identified.

#### **NOTICE**

Different hydraulic oils can be added according to customer requirements upon factory delivery, but cannot be mixed.

### INSPECTING FUEL LEVEL

#### NOTICE

Be sure to shut down the engine before inspection.

Keeping the diesel fuel at an appropriate level is vital to maintaining the engine performance and extending service life. An inappropriate fuel level will bring damage to the engine parts and lead to improper functioning of the machine.

Perform the following procedures with the boom in stowed position:

 Turn the Ground/Platform control select switch at the ground controller to the ground control position, and pull out the emergency stop button at the ground controller to the ON position, and then turn on the key switch at the ground controller, the ground control display will show the diesel fuel percentage.



Figure 5-2

2. OR turn the Ground/Platform control select switch at the ground controller to the platform control position, and pull out the emergency stop buttons at both the ground and platform controller to the ON position, and then turn on the key switch at the ground controller, the platform control display will show the diesel fuel level.



Figure 5-3

**3.** When the fuel level is less than or equal to 10%, the alarm will sound, make sure to add fuel to continue work.



- Ensure the fuel tank and its connections are free of leaks.
- 5. Add fuel with the engine off only.
- **6.** Open the cap of fuel tank, add fuel as needed. Never overfill the tank, and it is recommended to add to 50%–100% of the tank capacity.

#### Table 5-2

DIESEL GRADE	RECOMMENDED AMBIENT TEMP
5#	Lowest temperature 8°C or higher
0#	Lowest temperature 4°C or higher
-10#	Lowest temperature -5°C or higher
-20#	Lowest temperature -14°C or higher
-35#	Lowest temperature –29°C or higher
-50#	Lowest temperature -44°C or higher

#### **NOTICE**

- The diesel has been drained off basically before delivery, so the customer should add diesel of appropriate grade to suit the operating ambient temperature and the governing emission regulations.
- Do not add mixed diesel of different grades.
- Light fuels may affect the fuel economy or damage the combustion components.
- It is recommended to use the diesel with sulphur content less than 5000ppm.
- It is recommended to use the diesel with min. cetane number of 45 at operating temperatures below 0°C and min. cetane number of 40 at operating temperatures over 0°C. When the cetane number of the diesel in use is less than the recommended number, it may lead to startup failure, instable running or large amount of white smoke.
- The max cloud point and pour point of the diesel must be 6°C less than the lowest operating ambient temperature.

### **WARNING**

#### **EXPLOSION AND FIRE HAZARD**



- Do not mix the diesel with gasoline, alcohol or their mixtures.
- Do not add diesel when the engine is running.



## **↑** WARNING

#### DAMAGED MACHINE HAZARD



Due to the extremely accurate tolerance match of the diesel injection system, it is critical to keep the fuel clean and free of dirt or water. The dirt or water entering the combustion system can cause severe damage to the fuel pump and injectors.

## INSPECTING ENGINE OIL LEVEL

#### NOTICE

Turn off the engine before inspection.

An appropriate engine oil level is vital to maintaining the engine performance and extending its service life, otherwise the engine parts will be damaged. Through daily check, the inspector can know about the changes in engine oil level which may indicate a system distress with the engine.

- Turn the ground/platform select switch to ground control.
- **2.** Pull out the emergency stop button at ground controller to ON position.
- Turn the key switch at ground controller to ON position.
- Move the engine start switch and idle it for 2 minutes.
- 5. Switch off the engine, and 5 minutes later open the turntable cover on the right side.
- **6.** Remove the engine dipstick to inspect the engine oil level.

- The engine oil level should be within the FULL and ADD marks.
- **8.** Add engine oil as needed. Do not overfill. It is recommended to use engine oil equivalent to or higher than CJ-4 with viscosity grade of 15W-40.

Table 5-3

VISCOSITY	RECOMMENDED AMBIENT TEMP
0W-30	-35°C ~ 0°C
5W-40	-25°C ~ 30°C
15W-40	-15°C ~ 40°C
20W-50	0°C ~ 50°C

#### **NOTICE**

- The engine oil filled by the factory is generally CJ-4 with viscosity 15W-40, suitable for regions with ambient temperature range of 15°C ~ 40°C. If the operating ambient temperature is outside of the range, please change the engine oil as appropriate.
- The multi-grade engine oil can provide excellent lubrication under high-temperature operating condition, reduce the sediments, and improve the engine low-temperature start performance and durability. Also, the multi-grade engine oil plays an important role in ensuring the machine meeting the emission standards.
- Do not mix the engine oils of different grades.
- It is recommended that the sulphated ash content not exceed 1%, otherwise it will damage the air valve or piston, and lead to excessive consumption of engine oil.
- The use of high-quality engine oil in conjunction with suitable oil filter and replacement interval of oil filter is very critical to maintaining engine performance and extending service life. If the oil or oil filter is not replaced as recommended, there will be sediments, contaminants or wear incurred which will shorten the engine service life.

## INSPECTING COOLANT LEVEL ( WATER-COOLED ENGINE )

The appropriate coolant level is vital to maintaining the engine performance and extending its service life, otherwise it will damage the engine parts. Through the daily check the inspector can know about the changes

on coolant level which may indicate a system distress with the engine.

### **⚠** WARNING

## HIGH TEMPERATURE AND PRESSURE HAZARDS



Before inspecting the coolant level, allow the coolant to cool down to room temperature, and slowly open the cover to release the pressure.



#### **NOTICE**

Turn off the engine before inspection.

- Turn off the engine, and open the right turntable cover.
- **2.** Open the cover of coolant box over the radiator to inspect the coolant level.

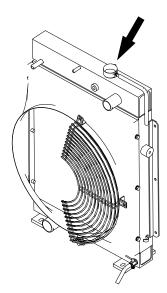


Figure 5-4

- The coolant level should be at the fill inlet of the coolant box.
- 4. Add coolant as needed. Do not overfill. It is recommended to choose the -18°C ready-mix coolant or the ethylene glycol(ethylene and propene) in ratio mix with water. The water quality must meet the requirements as listed in the table below.



#### Table 5-4

COOLANT TYPE	RECOMMENDED AMBIENT TEMP
-18°C ready-mix coolant	-18°C or higher
-37°C ready-mix coolant	-37°C or higher
50% ethylene glycol and 50% water mixed coolant	-32°C ~ 0°C
650% ethylene glycol and 40% water mixed coolant	-54°C ~ -32°C

#### **NOTICE**

- Do not apply sealing additive to the cooling system, otherwise it will cause blockage to the low-fludity area, radiator and engine oil cooler, or damage the water pump sealing.
- Do not apply soluable engine oil to the cooling system, otherwise it will corrode the brass and copper, damage the surface of heat exchanger, sealings and hose.
- The water added into the coolant must meet the requirements of calcium and magnesium less than 170ppm and sulphur less than 100ppm. Excessive calcium and magnesium can lead to scale formation, and excessive chloride and sulfate can corrode the cooling system.

## **INSPECTING THE BATTERY**

Battery condition is critical to machine performance and safe operation. A battery with improper electrolyte level or damaged cables and wiring may harm battery parts and may pose dangerous conditions.

## **↑** WARNING

#### **ELECTROCUTION HAZARD**



 Contact with live circuit may cause serious injury or death. Be sure to wear goggles, gloves and protective clothing.



 Remove all rings, watches and other jewelry.

## **WARNING**

#### **CHEMICAL BURN HAZARD**



Avoid battery acid spills or contact with unprotected skin. If battery acid comes into contact with skin, wash the skin immediately with plenty of water and seek medical attention immediately.

If battery acid spills, use water mixed with bicarbonate (baking soda) to neutralize the acid.

- Inspect the battery level to make sure the consumed battery power is no more than 80% of the total capacity. Charge the battery after each use.
- Ensure the battery cells are wired reliably with the locking nuts torqued to the specifications as below:

Nut type	Torque
M8	9 ~ 11Nm (6.6 ~ 8.1ft-lb)
M10	18 ~ 23Nm (13.2 ~ 17ft-lb)

#### NOTICE

Improper connection may cause reduced performance, damaged terminals, fusions and even fires.

- Ensure the battery negative and positive are correctly connected.
- Ensure the battery connections are not corroded.
- Check the battery electrolyte level is proper (for lead-acid battery requiring maintenance)
- Check the battery box for accumulation of water, and if any, clear the water.
- Check the paint of battery for damage, if any, repair immediately to prevent corrosion and keep the box insulated.

**Note:** Adding terminal protectors or applying anticorrosion agent will help the terminals and cables from corrosion.

## 6 PRE-OPERATION FUNCTION TEST

## **WARNING**

#### **UNSAFE OPERATION HAZARD**



Be sure to follow the instructions and safety rules in this manual. Failure to follow the instructions and safety rules in this manual may result in death or serious injury.

Do not operate this machine unless you have learned and practiced the rules for safely operating the machine as stated in this manual.

- Know and understand the safety rules before continuing the next step.
- · Avoid dangerous situations.
- Always check the machine before operating.
- Select appropriate machinery and personal protective equipment (hard hats, safety belt and gloves, etc.) for the task.
- Always perform a pre-operation function test before using the machine.
- · Check the work site.
- Check the safety decals/ nameplate on the machine.
- Only use the machine according to the instructions in this manual and for its intended purpose.

Conducting a pre-operation function test helps you discover potential problems before you start using the machine. The operator must test all machine functions according to the instructions in this manual.

Do not use a machine with problems or malfunctions. Mark the machine and do not use it if you discover any problems. Only qualified maintenance technicians can repair the machine according to the manufacturer's regulations.

After any maintenance, the operator must perform another pre-operation inspection before conducting a pre-operation function test.

## PREPARING FOR A PRE-OPERATION FUNCTION TEST

#### NOTICE

All the pre-operation function tests must be completed within the same period..

#### NOTICE

In cold weather, auxiliary devices are needed to start the machines.

Before beginning a pre-operation function test:

- Select a test area that has a solid, flat, level surface.
- 2. Ensure the test area is free of obstacles.

## TESTING THE GROUND CONTROLLER

#### NOTICE

All the function tests of the ground controller must be completed within one cycle.



TB26J Plus Operation Manual

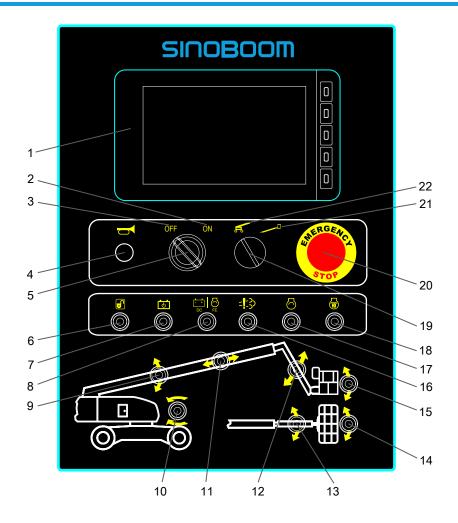


Figure 6-1 Ground Controller (EU Stage V)

Table 6-1

Display (see the figure and table below)	9. Main boom up/down switch	17. Engine start switch
2. ON position	10. Turntable rotate switch	18. Glow plug switch (if equipped)
3. OFF position	11. Main boom telescope switch	19. Ground/Platform select switch
4. Horn button	12. Jib up/down switch-TB26J Plus only	20. Emergency stop button
5. Key switch	13. Jib rotate switch (not used)	21. Platform control position
6. Enable switch	14. Platform rotate switch	22. Ground control position
7. Emergency power switch	15. Platform level switch	
8. DC/FE mode select switch (not used)	<b>16.</b> After-treatment regeneration request switch (if equipped)	



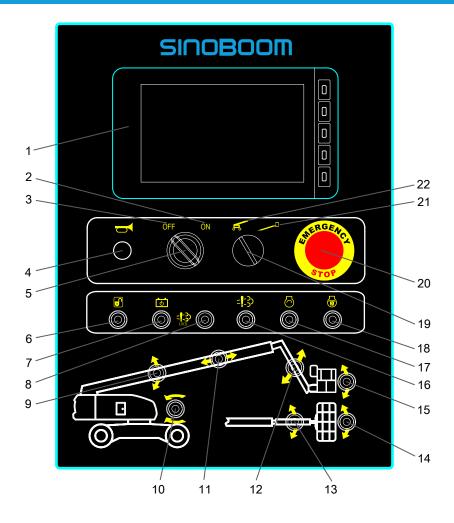



Figure 6-2 Ground Controller (China Stage 3/4 & US Stage 3/4)

Table 6-2

Display (see the figure and table below)	9. Main boom up/down switch	17. Engine start switch
2. ON position	10. Turntable rotate switch	18. Glow plug switch (if equipped)
3. OFF position	11. Main boom telescope switch	19. Ground/Platform select switch
4. Horn button	<b>12.</b> Jib up/down switch-TB26J Plus only	20. Emergency stop button
5. Key switch	13. Jib rotate switch (not used)	21. Platform control position
6. Enable switch	14. Platform rotate switch	22. Ground control position
7. Emergency power switch	15. Platform level switch	
8. After-treatment regeneration disable switch (if equipped)	<b>16.</b> After-treatment regeneration request switch (if equipped)	

TB26J Plus Operation Manual 6-3 © Nov. 2022



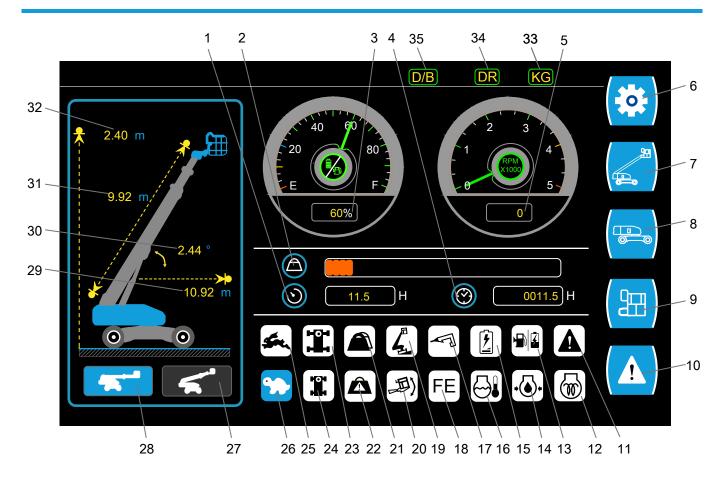

**Figure 6-3 Ground Controller Display** 

Table 6-3

1. Current work hours	13. Low diesel/battery alarm	<b>25.</b> Engine high idle
2. Platform load	14. Engine oil pressure alarm	26. Engine low idle
3. Diesel/Battery gauge	15. Generator mode indicator-FE mode	27. Operating position
4. Accumulated work hours	16. Water temp alarm	28. Non-operating position
5. Tachometer	17. Hydraulic generator/inverter on	29. Boom horizontal reach
6. Setup menu	18. FE mode indicator	30. Boom angle above horizontal
7. Machine info	19. Chassis tilt alarm	31. Boom length
8. Turntable info	20. Platform tilt alarm	32. Platform height
9. Platform info	21. Heavy load indicator	33. Overload limit
10. Alarm message	22. Overload alarm	34. Drive limit (operating position)
11. Fault alarm	23. Axle extended in place	<b>35.</b> Drive and boom functions allowed



#### PRE-OPERATION FUNCTION TEST

12. Glow plug	<b>24.</b> Axle retracted in place	

#### Note:

- 1. When the Overload Limit symbol appears, if the platform is overloaded, a series of functions will be restricted if the machine is in operating position. Details are provided below.
- 2. When the Drive Limit symbol appears, it indicates the drive function is restricted if the machine is in operating position.
- **3.** When the Drive & Boom Function Allowed symbol appears, it indicates the drive and boom functions are allowed to operate simultaneously.

## **WARNING**

#### **UNSAFE OPERATION HAZARD**



- Unless in emergency situations, never operate the machine from the ground controller if there are still persons on the platform.
- Never operate the machine if any control handle or switch that controls the platform movement does not return to the OFF position after being released.

## **WARNING**

#### **COLLISION HAZARD**



Before operating the boom, ensure the area near or under the platform is clear of persons or obstructions.

#### **Preparation**



- **1.** Turn the Ground/Platform select switch at the ground controller to ground control position.
- 2. Pull out the emergency stop button at the ground controller to ON position.
- Turn the key switch at the ground controller to ON position.
- **4.** Ensure the relevant indicator light on the display should be on and no error should be present.

#### Horn button



Push the horn button, the horn should sound.

#### **Engine start switch**



Move the engine start switch, the engine should be started smoothly without abnormal noise.

**Note:** The switch will get irresponsive after engine startup.

#### Glow plug switch (if equipped)

#### NOTICE

Before operating the machine at low temperature, preheat the engine for 5min to prevent damage to the hydraulic system.



Move and hold the engine glow plug switch 6-10s, the engine should take in air for preheating.

**Note:** The electrically controlled engine can be preheated automatically.

#### **Emergency stop button**





- 1. Push in the emergency stop button on the ground controller to OFF position and move the engine start switch. The engine should fail to start and all functions should be inoperative.
- 2. Pull out the emergency stop button on the ground controller to ON position and move the engine start switch. The engine should start normally.

#### **Ground/Platform select switch**




- Turn the Ground/Platform select switch on the ground controller to ground control position. The functional operation should be only allowed on the ground controller, while the platform controller should be inoperative.
- Turn the Ground/Platform select switch on the ground controller to platform control position. The functional operation should be only allowed on the platform controller, while the ground controller should be inoperative.

#### **Enable switch**




- 1. Move both the enable switch and the engine start switch, the engine should fail to start.
- 2. Move the engine start switch without moving the enable switch, the engine should start normally.
- **3.** Move any function switch without moving the enable switch, the corresponding function should be inoperative.
- **4.** Move any function switch together with the enable switch, each function should operate normally.

#### Main boom up/down switch

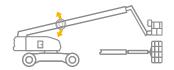


- 1. Move the enable switch and meanwhile move upwards the main boom up/down switch, the main boom should raise smoothly.
- 2. Move the enable switch and meanwhile move downwards the main boom up/down switch, the main boom should raise smoothly without shaking or abnormal noise, and the buzzer will sound.

#### Main boom telescope switch

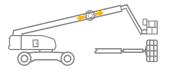

- 1. Move the enable switch and meanwhile move rightwards the main boom telescope switch, the main boom should extend smoothly.
- 2. Move the enable switch and meanwhile move leftwards the main boom telescope switch, the main boom should retract smoothly.

#### **Turntable rotate switch**

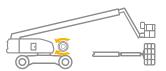

- 1. Move the enable switch and meanwhile move upwards the turntable rotate switch, the turntable should rotate counterclockwise.
- Move the enable switch and meanwhile move downwards the turntable rotate switch, the turntable should rotate clockwise.

#### Platform level switch


## **⚠** WARNING

#### **FALL HAZARD**




The platform leveling function is only used for slight adjustment of the platform. Improper operation may result in unintended movement or fall of the load/occupants.



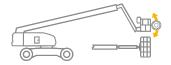


- Move the enable switch and meanwhile move upwards the platform level switch, the platform should level up.
- 2. Move the enable switch and meanwhile move downwards the platform level switch, the platform should level down.

#### Platform rotate switch

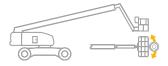


- 1. Move the enable switch and meanwhile move upwards the platform rotate switch, the platform should rotate counterclockwise.
- 2. Move the enable switch and meanwhile move downwards the platform rotate switch, the platform should rotate clockwise.

#### Jib up/down switch-TB26J Plus only

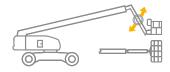

- Move the enable switch and meanwhile move upwards the jib up/down switch, the jib boom shall go up.
- 2. Move the enable switch and meanwhile move downwards the jib up/down switch, the jib boom shall go down and the buzzer will sound.

#### Jib rotate switch (not used)

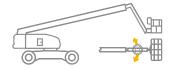

- Move the enable switch and meanwhile move upwards the jib rotate switch, the jib boom shall rotate counterclockwise.
- Move the enable switch and meanwhile move downwards the jib rotate switch, the jib boom shall rotate clockwise.

#### **Emergency power switch**

#### **NOTICE**

- The emergency power switch is only used for a short period of time (to fully lower the platform from the maximum degree) when the engine fails.
- When the emergency power is in use, do not operate two or more functions simultaneously, otherwise the auxiliary motor and pump will get overloaded.



Move both the emergency power switch and each function switch/handle, the corresponding function should operate normally.

#### Buzzer

The buzzer shall give a sound-light alarm at variable frequency when the following situations occur:

- Main boom or jib boom down
- Machine overloaded
- · Machine tilted
- Length sensor faulted
- Angle sensor faulted
- Other faults

## After-treatment regeneration disable switch (if equipped)



After flipping the after-treatment regeneration disable switch, the machine cannot enter the regeneration state.

## After-treatment regeneration request switch (if equipped)



Engines of EU Tier V standard: flip the after-treatment regeneration request switch, the engine will enter parked regeneration state.
Engines of China Tier III/IV & EPA Tier III/IV standards: with the after-treatment regeneration disable switch in OFF state, flip the after-treatment regeneration request switch, the engine will enter active regeneration state.




## TESTING THE PLATFORM CONTROLLER

### **NOTICE**

All the tests of the platform controller should be completed within the same cycle.



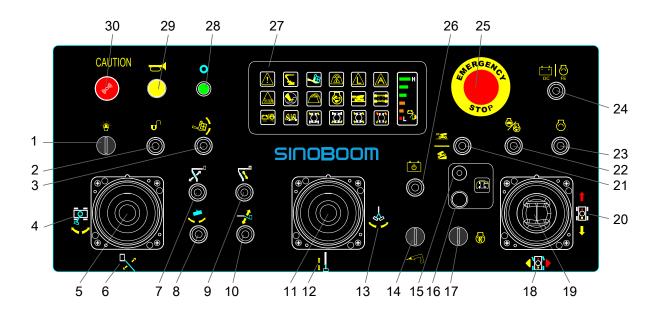

**Figure 6-4 Platform Controller** 

#### Table 6-4

1. Work light switch (if equipped)	11. Main boom telescope/jib rotate control handle	21. Drive high/low speed select switch
2. Release switch (if equipped)	12. Main boom telescope direction	22. Engine high/low speed select switch
3. Platform level switch	13. Jib rotate direction (not used)	23. Engine start switch
4. Turntable rotate direction	<b>14.</b> Hydraulic generator switch (if equipped)	24. Not used
5. Main boom lift/turntable rotate control handle	15. Rear position indicator light	25. Emergency stop button
6. Main boom lift direction	16. Rear position travel drive switch	26. Emergency power switch
7. Not used	17. Glow plug switch (if equipped)	27. Malfunction indicator panel
8. Platform rotate switch	18. Steer direction	28. Power indicator light
9. Not used	19. Drive/steer control handle	29. Horn button
<b>10.</b> Jib up/down switch-TB26J Plus only	20. Drive direction	<b>30.</b> Buzzer button

TB26J Plus Operation Manual 6-9 © Nov. 2022



## **WARNING**

#### **UNSAFE OPERATION HAZARD**



- Unless in emergency situations, never operate the machine from the ground controller if there are still persons on the platform.
- Never operate the machine if any control handle or switch that controls the platform movement does not return to the OFF position after being released.
- Do not remove, alter or disable the foot switch by adding a block or any other ways to prevent severe death or injury.

## **WARNING**

#### **COLLISION HAZARD**



Before operating the boom, ensure the area near or under the platform is clear of persons or obstructions.

#### **Preparation**



- **1.** Turn the Ground/Platform select switch at the ground controller to Platform.
- Pull out the emergency stop buttons at both ground and platform controllers to ON position.
- Turn the key switch at ground controller to ON position.
- Ensure the power indicator light is on and no error message is present.

#### **Power indicator light**



Light ON indicates the platform controller is normally powered.

#### Horn button



Push the horn button, the horn should sound.

#### Foot switch



- Depress the foot switch and meanwhile move the engine start switch, the engine should not start.
- **2.** Release the foot switch, and move the engine start switch, the engine should start.
- Release the foot switch, and directly move any function switch/handle, the function should not operate and the buzzer should sound.
- Depress the foot switch and meanwhile move any function switch/handle, the function should operate.
- Move any function switch and then depress the foot switch, the function should not operate and the buzzer should sound.
- **6.** Depress the foot switch and 7 seconds later move any function switch/handle, the function should not operate and the buzzer should sound.

#### **Engine start switch**



Move the engine start switch, the engine should start smoothly without abnormal noises.

**Note:** The switch will get irresponsive after engine startup.

#### Glow plug switch (if equipped)

#### NOTICE

Run the engine at low idle for 3–5min to preheat the engine before applying any loads.



Move and hold the glow plug switch for 6-10s, the engine should take in air for preheating.





**Note:** The electrically controlled engine can be preheated automatically.

#### **Emergency stop button**



- 1. Push in the emergency stop button on the platform controller to OFF position and move the engine start switch. The engine should fail to start and all functions should be inoperative.
- 2. Pull out the emergency stop button on the platform controller to ON position and move the engine start switch. The engine should start normally.
- 3. Push in the emergency stop button on the ground controller to OFF position and pull out the emergency stop button on the platform controller to ON position, and then move the engine start switch, the engine should fail to start and all functions should be inoperative.

#### Engine high/low speed select switch





Move the engine high/low speed select switch, the engine should be switched between high/low speed.

#### **Drive function**



- Depress the foot switch and move forward the Drive/Steer control handle, the machine shall drive forward smoothly without noticeable impact in startup; when the handle is released, the machine should be held reliably.
- Depress the foot switch and move backward the Drive/Steer control handle, the machine should drive reverse smoothly without noticeable impact in startup; when the handle is released, the machine should be held reliably.

**Note:** The drive speed is in direct proportion to the stroke of control handle.

#### Steer function



- Depress the foot switch and move forward the Drive/Steer control handle, and press the left side of the thumb rocker switch on top of the drive control handle, the machine should steer left.
- 2. Depress the foot switch and move forward the Drive/Steer control handle, and press the right side of the thumb rocker switch on top of the drive control handle, the machine should steer right.

**Note:** The steering drive speed is in direct proportion to the stroke of control handle.

#### Drive high/low speed select switch



#### **TIPPING HAZARD**



The machine must drive at low speed when not on a level surface.







 With the machine traveling in stowed position, push upward the drive high/low select switch, the drive speed shall be switched to high speed, and the high drive speed indicator light shall be lit.

#### Note:

- Before the machine traveling in stowed position, if the drive high/low speed select switch is left in high speed position, after the drive function is activated, the machine will start to run at high speed immediately.
- With the machine traveling in stowed position, by pushing upward the drive high/low speed select switch, the machine will start to run at high drive speed immediately.

Make sure the surrounding area is free of obstructions or persons before performing the above operations to avoid colliding with obstructions or persons. Besides, the operator shall pay attention to personal safety.

2. With the machine traveling in stowed position, pull down the drive high/low speed select switch, the drive speed shall be switched to low speed, and the high drive speed indicator light shall be off.

#### **Turntable rotate**



- Depress the foot switch and move leftwards the main boom lift/turntable rotate proportional control handle, the turntable should rotate clockwise.
- Depress the foot switch and move rightwards the main boom lift/turntable rotate proportional control handle, the turntable should rotate counterclockwise.

**Note:** The turntable rotate speed is in direct proportion to the stroke of control handle.


#### Main boom up/down



- 1. Depress the footswitch and move forward the main boom lift/turntable rotate proportional control handle, the main boom should lift smoothly without shaking or abnormal noise.
- Depress the footswitch and move backward the main boom lift/turntable rotate proportional control handle, the main boom should lower smoothly without shaking or abnormal noise, and the buzzer should sound.

**Note:** The main boom up/down speed is in direct proportion to the stroke of control handle.

#### Main boom telescope

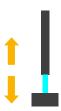

- Depress the foot switch and move backward the main boom telescope/jib rotate proportional control handle, the main boom should extend smoothly without shaking or abnormal noise.
- 2. Depress the foot switch and move forward the main boom telescope/jib rotate proportional control handle, the main boom should retract smoothly without shaking or abnormal noise.

**Note:** The main boom telescope speed is in direct proportion to the stroke of control handle.

#### Jib rotate switch (not used)



- 1. Depress the foot switch and move leftwards the main boom telescope/jib rotate proportional control handle, the jib should rotate clockwise.
- Depress the foot switch and move rightwards the main boom telescope/jib rotate proportional control handle, the jib should rotate counterclockwise.

**Note:** The jib rotate speed is in direct proportion to the stroke of control handle.

#### Platform level switch

## **WARNING**

#### **FALL HAZARD**



The platform leveling function is only used for slight adjustment of the platform. Improper operation may result in unintended movement or fall of the load/occupants.



- **1.** Depress the footswitch and move upwards the platform level switch, the platform should level up.
- Depress the footswitch and move downwards the platform level switch, the platform should level down.

#### Platform rotate switch



- 1. Depress the footswitch and move leftwards the platform rotate switch, the platform should rotate clockwise.
- 2. Depress the footswitch and move rightwards the platform rotate switch, the platform should rotate counterclockwise.

#### Jib up/down switch-TB26J Plus only



- 1. Depress the footswitch and move upwards the jib up/down switch, the jib boom should go up.
- 2. Depress the footswitch and move downwards the jib up/down switch, the jib boom shall go down, and the buzzer should sound.

#### **Emergency power switch**


#### **NOTICE**

- The emergency power switch serves only for a short time of use (fully lower the platform from the maximum degree) when the engine fails.
- When the emergency power is in use, do not operate two or more functions simultaneously, otherwise the auxiliary motor and pump will get overloaded.



Depress the footswitch and move both the emergency power switch and each function switch/handle, the corresponding function shall operate normally.

#### Rear position indicator light

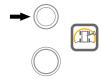

When the boom rotates beyond the rear wheels, the drive function should close and the rear position indicator light should flash at an interval of 0.5s.

#### Rear position travel drive switch



When the rear position indicator light is flashing, the drive function should be closed. Move the rear position travel drive switch, the light shall be lit and the drive function should resume.

#### NOTICE

When driving reverse, the machine will drive and steer in opposite direction as indicated.

#### **Hydraulic generator switch (if equipped)**





When the engine runs at idle speed stably, depress the foot switch and move the hydraulic generator switch. All movements (including boom and travel movements) of the machine will be stopped, and the engine will automatically turn to high speed. After the engine runs at high speed stably for 5s, the solenoid valve of the hydraulic generator will be energized and start to generate electricity.

#### Work light switch (if equipped)



Move the work light switch, the work light should be on/off.

#### **Buzzer**

The buzzer should give a sound-light alarm at variable frequency when the following situations occur:

- · Main boom or jib boom down
- Machine overloaded
- Machine tilted
- · Length sensor faulted
- · Angle sensor faulted
- Other faults

#### System distress indicator light



The system distress indicator light will be lit under the following conditions:

- Low fuel level
- · Low engine oil pressure
- High engine water temperature
- CAN bus error
- Other faults

#### Chassis tilt indicator light



When the machine is tilted, the alarm should sound and the chassis tilt indicator light should be on.

#### **NOTICE**

Should the chassis tilt indicator light come on when the boom is raised or extended, retract and lower the boom to stowed position.

#### Platform tilt indicator light



When the platform tilts excessively, the platform tilt indicator light should be on.

#### Overload indicator light



When the load on the platform exceeds the rated platform capacity, the overload indicator light should be on.

#### Length sensor malfunction indicator light



When the length sensor malfunctions, the length sensor malfunction indicator light should be on.

#### Angle sensor malfunction indicator light



When the angle sensor malfunctions, the angle sensor malfunction indicator light should be on.

#### Range limit indicator light





When the boom is beyond the working range, the range limit indicator light should be on.

#### Foot switch indicator light



When the footswitch is pressed down, the foot switch indicator light should be on.

#### **Heavy load indicator light**



When the platform operates within the heavy-load working envelope, if the load applied to the platform exceeds the light rated load, the heavy-load indicator light will come on.

#### Engine high idle indicator light



When the engine runs at high idle (rpm), the engine high idle indicator light should be on.

#### Drive high speed indicator light



When the machine drives at high speed, the drive high speed indicator light should be on.



When the main boom enters the automatic control mode, the main boom auto control mode indicator light will be on.

### **TESTING THE DRIVE SPEED**

- Move the engine start switch on the platform controller.
- 2. Depress the foot switch.
- Slowly push forward the drive/steer control handle to full drive speed.
- **4.** Move the engine high/low speed select switch on the platform controller to select the engine high speed.
- Move upward the drive high/low speed select switch on the platform controller to select the drive high speed.
- 6. The test results should be as shown in the table below:

#### Table 6-5

POSITION	MAX DRIVE SPEED
Operating	1.1km/h (0.68mph)
Non-operating	4.8km/h (3mph)

#### **NOTICE**

If the drive speed exceeds the test results as shown above by 10%, please immediately tag the machine and remove it from service.

## TESTING THE EMERGENCY LOWERING FUNCTION

When the engine/motor fails, depending on the actual conditions, move the emergency power switch on the ground or platform controller to start the hydraulic pump, and meanwhile move the function switch to enable the boom lowering, retracting and rotating.

#### NOTICE

- The emergency power switch serves only for a short time of use (with the platform fully lowered from the maximum degree and length possible) when the engine/motor fails.
- When the emergency power is in use, do not perform two or more functions simultaneously, otherwise the auxiliary motor and pump will get overloaded.

#### Operating from the ground:

#### PRE-OPERATION FUNCTION TEST



- Turn the Ground/Platform select switch on the ground controller to the ground control position.
- **2.** Pull out the emergency stop button on the ground controller to the ON position.
- Turn the key switch on the ground controller to the ON position.
- Move and the hold the emergency power switch on the ground controller.
- **5.** Move the corresponding boom function switch on the ground controller to lower the platform.

#### Operating from the platform:

- Turn the Ground/Platform select switch on the ground controller to the platform control position.
- 2. Pull out the emergency stop buttons on both the ground and platform controllers to the ON position.
- **3.** Turn the key switch on the ground controller to the ON position.
- **4.** Depress the footswitch, move and the hold the emergency power switch on the platform controller.
- **5.** Move the corresponding boom function switch on the platform controller to lower the platform.

## TESTING THE TILT PROTECTION SYSTEM

- 1. Start the machine.
- 2. With the machine in non-operating position, flip the level switch to exceed 5°in X (left-to-right)/Y (front-to-back) direction.
- **3.** The tilt alarm sounds and the chassis tilt indicator light flashes, no function is restricted.
- **4.** With the machine in operating position, flip the level switch to exceed 5°in X (left-to-right)/Y (front-to-back) direction.
- 5. The tilt alarm should sound with the chassis tilt indicator light flashing, some functions are restricted, but the boom retracting, turntable rotating and boom lowering when retracted to less than 1.2m (3ft 11in) should be allowed.
- 6. Place two wooden blocks under the two wheels on the left or right side of the machine. The wooden block measures 750×250×190mm (2.46×0.82×0.6ft). With the machine in nonoperating position, drive it onto the two wooden blocks.
- The tilt alarm should sound with the chassis tilt indicator light flashing, no function should be restricted.
- **8.** Drive the machine off and remove the wooden blocks.

- 9. Place two wooden blocks under the two wheels on the front or rear of the machine. The wooden block measures 750×250×265mm (2.46×0.82×0.87ft). With the machine in operating position, drive it onto the two wooden blocks.
- 10. The tilt alarm should sound with the chassis tilt indicator light flashing, some functions are restricted, but the boom retracting, turntable rotating and boom lowering when retracted to less than 1.2m (3ft 11in) should be allowed.
- Retract and lower the boom, drive off the machine in non-operating position and remove the wooden blocks.

## TESTING THE ENVELOPE RESTRICTION

#### Max boom outreach

#### 0kg≤platform capacity≤300kg (661 lb)

- **1.** Turn the Ground/Platform select switch at ground controls to the Ground.
- **2.** Pull out the emergency stop button at the ground controls to ON position.
- Turn the key switch at ground controls to ON position.
- **4.** Using the main boom lift and jib up/down function (if equipped), adjust the main boom and jib boom (if equipped) to horizontal.
- **5.** Using the main boom telescope function, extend the main boom.
- **6.** When the boom extends to the farthest (the ground display reads 20m of boom length), the buzzers at the ground and platform controls should be sounding, boom further extending and boom up/down should be restricted, but boom retracting and turntable rotating should be allowed.
- Using the main boom telescope switch, retract the boom.
- 8. The boom can be fully retracted.

#### 300kg (661 lb)≤platform capacity≤454kg (1000 lb)

- Turn the Ground/Platform select switch at ground controls to the Ground.
- **2.** Pull out the emergency stop button at the ground controls to ON position.
- Turn the key switch at ground controls to ON position.
- **4.** Using the main boom lift and jib up/down function (if equipped), adjust the main boom and jib boom (if equipped) to horizontal.



#### PRE-OPERATION FUNCTION TEST

- 5. Using the main boom telescope function, extend the main boom.
- 6. When the boom extends to the farthest (the ground display reads 17.91m of boom length), the buzzers at the ground and platform controls should be sounding, boom further extending and boom up/down should be restricted, but boom retracting and turntable rotating should be allowed.
- Using the main boom telescope switch, retract the boom.
- 8. The boom can be fully retracted.

#### Max boom up/down angle

- 1. Turn the Ground/Platform select switch at ground controls to the Ground.
- **2.** Pull out the emergency stop button at the ground controls to ON position.
- Turn the key switch at ground controls to ON position.
- Using the main boom lift and jib up/down function (if equipped), adjust the main boom and jib boom (if equipped) to horizontal.

- **5.** Using the main boom telescope function, extend the main boom.
- **6.** When the main boom is raised to the upper limit of lift angle (ground display reads 70°[±1°]), the boom should be prevented from further raising.
- 7. When the main boom is lowered to the lower limit of lift angle (ground display reads -12°[±1°]), the boom should be prevented from further lowering.
- **8.** Using the boom telescope and up/down function, retract and lower the boom.
- **9.** The boom can be fully retracted.

**Note:** The allowable tolerance of angle sensor do not exceed 0.5° through the full metering range.

## TESTING THE WEIGHING SYSTEM

Before the test, fully raise and lower the boom and fully extend and retract the boom at least twice to ensure the pulley and track are adequately lubricated.

#### Table 6-6

MODES	TEST RESULTS
KG mode	Under restricted configuration: When the load does not exceed 454kg (1000 lb), ensure that the platform is able to lift to the highest position. When the load exceeds 454kg (1000 lb), the buzzer will sound continuously, the overload indicator light will flash, the display screen will indicate platform overload, all motion functions are restricted and will not resume until the excessive load is removed. Under unrestricted configuration: When the load does not exceed 300kg (661 lb), ensure that the platform is able to lift to the highest position. when the load exceeds 300kg (661 lb), the buzzer will sound continuously, the overload indicator light will flash, the display screen will indicate platform overload, all motion functions are restricted and will not resume until the excessive load is removed.
Non-KG mode	Under restricted configuration: When the load does not exceed 454kg (1000 lb), ensure that the platform is able to lift to the highest position. When the load exceeds 454kg (1000 lb), the buzzer will sound continuously, the overload indicator light will flash, the display screen will indicate platform overload, some motion functions will be restricted, but boom retracting, turntable rotating and boom lowering after fully retracted is allowed. All motion functions will not resume until the excessive load is removed. Under unrestricted configuration: When the load does not exceed 300kg (661 lb), ensure that the platform is able to lift to the highest position. When the load exceeds 300kg (661 lb), the buzzer will sound continuously, the overload indicator light will flash, the display screen will indicate platform overload, some motion functions will be restricted, but boom retracting, turntable rotating and boom lowering after fully retracted is allowed. All motion functions will not resume until the excessive load is removed.



## **WARNING**

#### **TIPPING HAZARD**



While performing override operation on the machine, please avoid operation in a dangerous direction.

For overseas models, with the machine in the KG mode, if activating any function switch while flipping the emergency power switch after an overload alarm, the override operation should be performed, and the corresponding action can be performed. The time of the override operation and the actual weight on the platform are recorded on the display.

### **NOTICE**

Override operation is an emergency operation in an emergency state. Before conducting any override operation, please make sure the surrounding area and the whole machine are in a safe state, try to avoid operation in a dangerous direction and ensure personal safety.

## 7 OPERATING THE MACHINE

## **WARNING**

#### **UNSAFE OPERATION HAZARD**



Be sure to follow the instructions and safety rules in this manual. Failure to follow the instructions and safety rules in this manual may result in death or serious injury.

Do not operate this machine unless you have learned and practiced the rules for safely operating the machine as stated in this manual.

- Know and understand the safety rules before continuing the next step.
- · Avoid dangerous situations.
- Always check the machine before operating.
- Select appropriate machinery and personal protective equipment (hard hats, safety belt and gloves, etc.) for the task.
- Always perform a pre-operation inspection.
- Always perform a pre-operation function test before using the machine.
- · Check the work site.
- Check the safety decals/ nameplate on the machine.
- Only use the machine according to the instructions in this manual and for its intended purpose.

This section provides specific instructions for all the aspects of machine operation. The operator is responsible for following all the safety rules and instructions in this manual.

Use this machine to transport people and tools to the workplace. It is unsafe and dangerous to use this machine for purposes other than what is stated in this manual.

Only trained and authorized personnel may operate the machine. If more than one operator uses the same machine at different times of the same work shift, they must all be qualified operators and follow all the safety rules and instructions in this *Operation Manual*.

Each new operator must perform the pre-operation inspection, pre-operation function test, and workplace checks before using the machine.

#### **STABILITY**

The machine stability is based on two conditions which are called forward stability and backward stability.

## **WARNING**

#### **TIPPING HAZARD**



Do not overload the platform or operate the machine on tilted surface to prevent forward or backward tipping.





Figure 7-1 Position of least forward stability

- 1. Boom fully extended;
- 2. Boom kept horizontal;
- 3. Turntable rotated 90°;
- **4.** The machine will tip over in the direction as indicated by the arrow if overloaded or operated beyond the limits of the maximum operating slope.



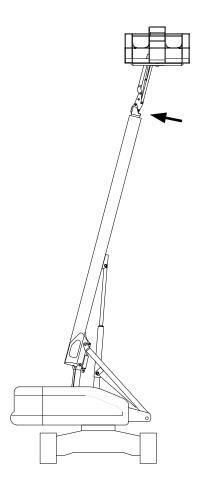


Figure 7-2 Position of least backward stability

- 1. Boom fully retracted;
- 2. Main boom fully elevated;
- 3. Jib fully elevated;
- 4. Turntable rotated 90°;
- **5.** Platform rotated 90°;
- **6.** The machine will tip over in the direction as indicated by the arrow if overloaded or operated beyond the limits of the maximum operating slope.

### **EMERGENCY STOP**

- Push in the emergency stop button on the platform controller to OFF, all the functions at the platform controller will get inoperative.
- Push in the emergency stop button on the ground controller to OFF, all the functions at both the ground controller and platform controller will get inoperative.
- Turn off the main power switch at the left side of turntable, the system power will be disconnected and all functions will get inoperative. The main

power switch is located as shown in the below figure.



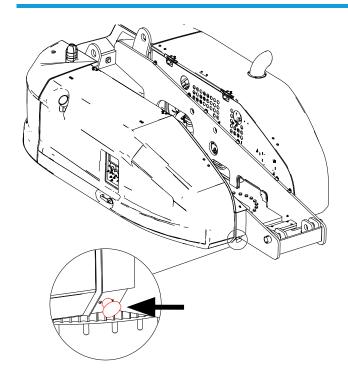


Figure 7-3

### **EMERGENCY LOWERING**

When the engine fails, move the emergency power switch on the turntable or platform controller as appropriate for emergency lowering of the platform.

For the specific operating procedure, please refer to Testing the Emergency Lowering Function, page 6-15

## **EMERGENCY OPERATING**

## When the operator is unable to control the machine:

- Other personnel should operate the machine from the ground controls only as required by the safety rules.
- 2. Other qualified personnel on the platform may use the platform controls. Do not continue operation if the controls do not function properly.
- 3. Cranes, forklift trucks or other equipment can be used to stabilize motion of the machine.

## When the platform or boom is caught overhead:

If the platform or boom becomes jammed or snagged in overhead structures or equipment, rescue all people in the platform before freeing the machine.

## EMERGENCY TOWING/ DRAGGING


## **MARNING**

#### **UNSAFE OPERATION HAZARD**



- Unless in case of emergency situations, machine malfunction, power loss or loading/unloading, it is strictly prohibited to tow or drag the machine.
- When towing/dragging the machine, there should be no person in the platform.
- Before towing/dragging the machine, ensure that the machine is in stowed position with the turntable securely locked and platform free of any tools or objects.
- Do not tow/drag the machine with the engine started or the drive hub engaged.
- The machine must on a level surface or secured before releasing the brake.
- The towing/dragging of the machine must follow the local laws and traffic rules.
- Choke wheels securely to prevent motion of the machine.
- 2. Ensure the travel path is free of obstacles and the main power switch is off.
- Loosen the bolts on each drive hub, then reverse the cover of drive hub.
- **4.** Tighten the bolts, till now the drive hub is disengaged and ready for towing/dragging.



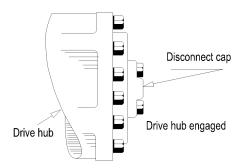

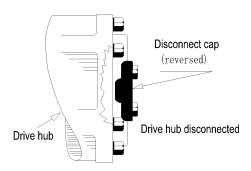


Figure 7-4

- **5.** After moving the machine, position machine on a firm level surface.
- Choke the wheels securely to prevent motion of the machine.
- 7. Loosen the bolts on each drive hub, then reverse the cover of drive hub.
- 8. Tighten the bolts and engage the drive hub.
- 9. Remove the chokes as necessary.

#### **NOTICE**

The allowable towing speed is 3km/h (1.9mph), the maximum towing distance is 1km (0.6mile)

## OPERATION FROM GROUND

## **WARNING**

#### **UNSAFE OPERATION HAZARD**



- Unless in emergency situations, do not operate the machine from the ground controller when there are personnel in the platform.
- Do not operate the machine if any control handle or switch does not return to off position after being released.

### **WARNING**

#### **COLLISION HAZARD**



When operating the boom, be sure the area around or under the platform is free of persons or obstacles.

#### **Before operation:**

- Be sure the battery is well connected before operating the machine.
- **2.** Turn the Ground/Platform select switch on the ground controller to Ground.
- **3.** Pull out the red emergency stop button on the ground controller to the ON position.
- **4.** Turn the key switch on the ground controller to the ON position.
- **5.** Move the engine start switch (not exceeding 15s) on the ground controller to start the engine.

#### **NOTICE**

- If the engine fails to get started immediately, do not keep starting the engine for too long; if a restart still fails, allow the starter to cool down for 2–3min; if the engine still fails to get started after several attempts, please reference the Maintenance Manual.
- Before applying any load, warm up the engine by running it at low speed for 3–5min.

#### To position platform:

1. Move the enable switch and meanwhile move upwards/downwards the boom up/down switch to raise or lower the main boom.



- Move the enable switch and meanwhile move rightwards/leftwards the boom telescope switch to extend or retract the main boom.
- 3. Move the enable switch and meanwhile move downwards/upwards the turntable rotate switch to rotate the turntable clockwise or counterclockwise.
- **4.** Move the enable switch and meanwhile move upwards/downwards the platform level switch to level up or down the platform.

## **WARNING**

#### **FALL HAZARD**



The platform level switch can only be used for slight leveling of the platform; improper use may cause the load/occupant to shift or fall.

- **5.** Move the enable switch and meanwhile move upwards/downwards the platform rotate switch to rotate the platform clockwise or anticlockwise.
- **6.** Move the enable switch and meanwhile move upwards/downwards the jib up/down switch to raise or lower the jib boom (TB26J Plus only).

#### To drive:

The drive function cannot be enabled on the ground controller.

#### To steer:

The steer function cannot be enabled on the ground controller.

## OPERATION FROM PLATFORM

## **⚠** WARNING

#### **UNSAFE OPERATION HAZARD**



- Unless in emergency situations, do not operate the machine from the ground controller when there are personnel in the platform.
- Do not operate the machine if any control handle or switch does not return to off position after being released.

## **WARNING**

#### **COLLISION HAZARD**



When operating the boom, be sure the area around or under the platform is free of persons or obstacles.

#### **Before operation:**

- 1. Make sure the battery is properly connected before operating the machine.
- **2.** Turn the Ground/Platform select switch on the ground controller to Platform.
- Pull out the red emergency stop buttons on both the ground and platform controllers to the ON position.
- **4.** Turn the key switch on the ground controller to the ON position.
- **5.** Move the engine start switch (not exceeding 15s) on the platform controller to start the engine.

#### NOTICE

- If the engine fails to get started immediately, do not keep starting the engine for too long; if a restart still fails, allow the starter to cool down for 2–3min; if the engine still fails to get started after several attempts, please reference the Maintenance Manual.
- Before applying any load, warm up the engine by running it at low speed for 3–5min.
- Do not start the engine with the foot switch depressed.
- If the machine shuts down unexpectedly due to the engine malfunction, be sure to correct the fault before restarting the engine.

#### To position platform:

- Depress the foot switch and meanwhile move forward/backward the main boom lift/turntable rotate control handle to raise or lower the main boom.
- 2. Depress the foot switch and meanwhile move backward/forward the main boom telescope/jib rotate control handle to extend or retract the main boom.
- Depress the foot switch and meanwhile move leftwards/rightwards the main boom lift/turntable rotate control handle to rotate the turntable clockwise or counterclockwise.
- **4.** Depress the foot switch and meanwhile move upwards/downwards the platform level switch to level up/down the platform.



## **WARNING**

#### **FALL HAZARD**



The platform level switch can only be used for slight leveling of the platform; improper use may cause the load/occupant to shift or fall.

- **5.** Depress the foot switch and meanwhile move leftwards/rightwards the platform rotate switch to rotate the platform clockwise or counterclockwise.
- **6.** Depress the foot switch and meanwhile move upwards/downwards the jib up/down switch to raise or lower the jib boom. (TB26J Plus)

#### To drive:

- Depress the foot switch and meanwhile move forward/backward the drive/steer control handle to drive the machine forward/backward.
- To speed up: slowly move the control handle off center.
- To speed down: slowly move the control handle towards center.
- To stop: return the control handle to center or release the foot switch.

When the boom is in operating position, the machine drive speed will be restricted.

#### To steer:

Depress the foot switch and meanwhile move forward the drive/steer control handle and press the left/right side of the thumb rocker switch on top of the handle to steer left/right.

#### To select drive speed:

The machine in non-operating position can run at two drive speed modes (high/low speed).

- 1. In the process of driving, move upward the drive high/low speed select switch to switch to high drive speed.
- 2. In the process of driving, move downward the drive high/low speed select switch to switch to low drive speed.

## **↑** WARNING

#### **TIPPING HAZARD**



The machine must be driven at low speed when tilted.

When in operating position, the machine can only drive at operating speed, and moving upward the drive high/

low speed select switch will not enable the high speed mode.

### **DRIVING ON A SLOPE**

## **MARNING**

#### **TIPPING HAZARD**




- Do not operate the machine on the slope exceeding the maximum slope rating (5°).
- Do not drive the machine across the slope exceeding the maximum side slope rating (14°).
- Do not drive the machine on the slope exceeding the machine gradeability.

#### Before driving on a slope :

 Determine the gradeability (climbing ability) of the machine.

#### Maximum gradeability:

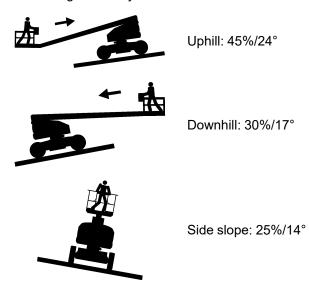

- **2.** Ensure the machine is in stowed position.
- Ensure the slope grade is within the limits of the machine gradeability.



### **NOTICE**

Gradeability refers to the maximum permissible percentage of the slope (or called slope grade as below) when the machine is on solid ground with sufficient traction and the platform is carrying only one person. As the weight of the machine's platform increases, the machine's gradeability reduces.

#### To determine the slope grade :

- 1. Use a carpenter's level, a straight piece of wood (at least 1 m [3.3 ft] long) and a tape measure.
- Measure the height H and length/distance L of the slope.

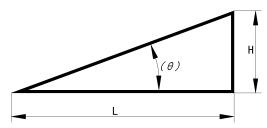


Figure 7-5

3. Slope grade= H/L x 100%.

#### **NOTICE**

The machine must not drive for over 2min on the maximum permissible slope grade to prevent the tires running suspended.

# 8 TRANSPORTING AND LIFTING THE MACHINE

## **WARNING**

## TRANSPORTATION AND LIFTING HAZARD



- Use a forklift or crane with the proper lifting capacity to lift the machine. Use good judgment and planned movement to control the machine.
- The transport vehicle must be parked on level ground.
- The transport vehicle must be secured from rolling when loading the machine.
- Ensure that the vehicle capacity, loading surface, belts or ropes are sufficient to support the weight of the machine, refer to 1 Machine Specifications, page 1-1.
- Before driving the machine onto the transport vehicle, ensure that the slope is within the limit of the machine gradeability, refer to 1 Machine Specifications, page 1-1.
- Before transportation and lifting, check if the rigging anchor point and its attached structure are in good condition.
- Be sure the machine is on a level surface or secured before releasing the brake.
- Never transport people on the machine while the machine is being towed or while the machine is engaged in towing or lifting operations.
- The machine should be transported following the local laws and traffic rules.
- When using a forklift or crane to lift the machine, prevent the machine from colliding with nearby objects.
- Lock the wheels of the machine after it has been loaded to prevent the machine from rolling.

#### NOTICE

Do not tow/drag the machine unless an emergency, failure or loss of power occurs. Refer to **Emergency Towing/Dragging**, page 7-4.



## LIFTING THE MACHINE WITH A CRANE

Follow these requirements when lifting the machine by crane:

- The boom must be stowed while lifting the machine with a crane.
- Ensure the boom is positioned in the same direction as the chassis travels.
- **3.** Ensure the controllers and chassis components are safe and reliable.
- 4. Remove all loose parts of the machine.
- **5.** Determine the center of gravity of the machine: X is 332mm (1ft 1in) in dimension, and Y is 1453mm (4ft 9in) in dimension.

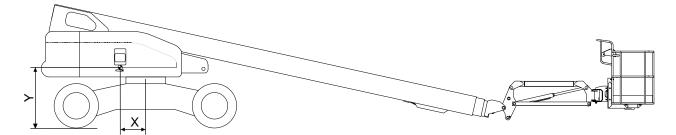


Figure 8-1

6. Lift the machine as shown in the figure below.

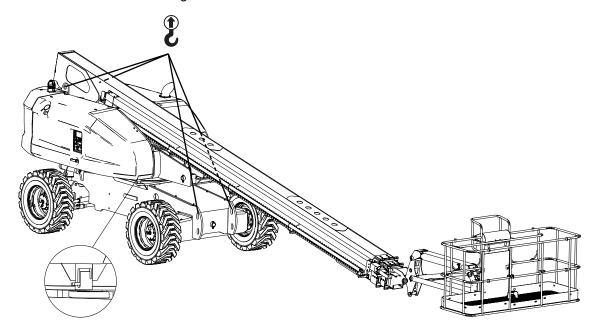


Figure 8-2

7. Only connect the rigging to the lifting point specified on the machine. Adjust the rigging to avoid damage to the machine and to keep the machine horizontal.

#### **NOTICE**

To protect the machine, choose the rigging with appropriate length.

## TRANSPORTING THE MACHINE

Follow these requirements when transporting the machine by truck or trailer:

**1.** Before transport, turn the key switch on ground controller to OFF, and remove the key.



### TRANSPORTING AND LIFTING THE MACHINE

- 2. Perform a thorough inspection of the machine to prevent loose or untightened components and ensure the safety pin of turntable is locked.
- 3. Ensure the rope or belt is of sufficient capacity.
- **4.** Use at least 4 ropes/belts to fasten the chassis and one rope/belt for the platform.
- Adjust the rigging to prevent damage to the rope/ belt.
- **6.** To protect the boom components and platform load sensors, do not apply too large a downward force to the rope/belt fastened near the platform. It is recommended to add a foam layer beneath the platform and ensure the platform is suspended in the air.

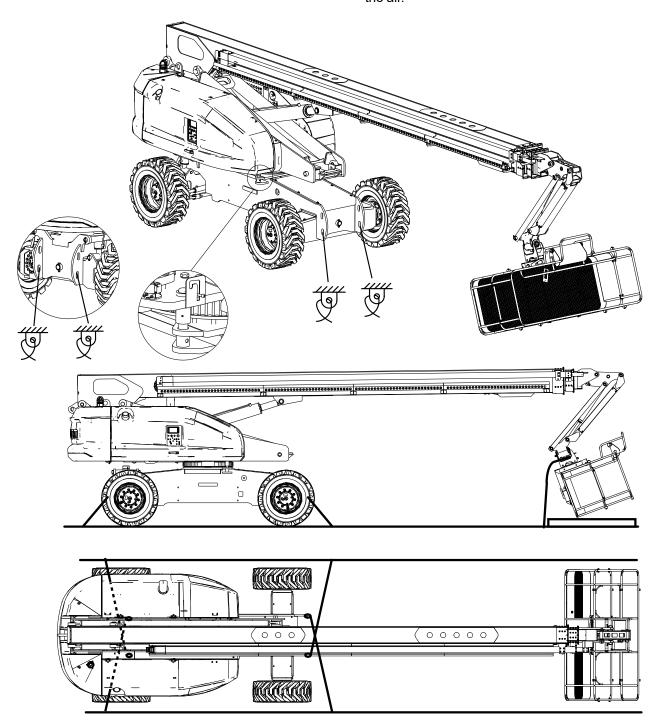


Figure 8-3

TB26J Plus Operation Manual 8-3 © Nov. 2022

## TRANSPORTING AND LIFTING THE MACHINE



This Page Intentionally Left Blank

## 9 MAINTENANCE

This section provides detailed procedures for regular maintenance inspections. For further information about maintenance, please see the *Maintenance Manual*.

## **WARNING**

#### **UNSAFE OPERATION HAZARD**



Failure to follow proper maintenance procedures may result in death, serious injury or damage to the machine.

#### Follow these general rules:

- Preventive maintenance procedure should be established by the user according to the manufacturer's recommendations, machine operational environment and intensity of use, which should include both the regular inspection and the annual inspection.
- Only professionally trained, qualified personnel can conduct routine maintenance inspections on this machine.
- The maintenance personnel must know various potential hazards that may arise during the inspection and maintenance work, and select appropriate safety protective equipment according to the maintenance work and work place conditions, such as safety helmets, protective masks, protective gloves, goggles, protective clothing, safety belts and safety shoes.
- Before conducting any inspection and maintenance work, the maintenance personnel shall prepare appropriate maintenance tools as required by the work, such as wrench, screwdriver, pliers, multimeter, pressure gauge, lubrication device, jack and lifting equipment.
- Daily routine maintenance inspections must be performed during normal operation of the machine. Maintenance inspectors must carry out inspection and maintenance according to the repair & inspection report and must complete the repair & inspection report.
- Regular maintenance inspections must be performed at quarterly, biannual and annual intervals. Qualified, trained personnel must check and maintain the machine according to the repair & inspection report and must complete the repair & inspection report.
- Immediately remove a damaged or malfunctioning machine from service, mark and stop using it.

- Repair any damaged or malfunctioning machine before operating it.
- Keep all machine inspection records for at least 10 years or until the machine is no longer in use or as required by machine owner/company/custodian.
- The inspection and maintenance intervals depend on the manufacturer's recommendations, and should also be appropriate to the operational conditions and environment.
- Conduct a quarterly inspection on machines that have been out of service for more than three months.
- Without the manufacturer's approval, do not change any parts, especially those load-bearing and safetyrelevant parts. The replacement parts used in the maintenance should be identical with or equivalent to the original parts.
- Any change that may affect the stability, strength or performance of the machine, must obtain the manufacturer's prior approval.
- After any major change or maintenance that may affect the stability, strength or performance of the entire machine or its parts, the machine must be inspected and verified.
- Unless otherwise specified, the maintenance procedures must be performed according the following terms and conditions:
  - Park the machine on flat, level and solid ground.
  - Place the machine in non-operating position.
  - Turn the key switch on ground controller to OFF position and remove the key to prevent unauthorized use of the machine.
  - Push in the red emergency stop buttons on ground and platform controllers to OFF position to avoid unintended start-up of the operating system.
  - Turn off the main power switch.
  - Disconnect all DC power from the machine.
  - Lock all wheels to prevent movement of the machine.
  - Before unscrewing or removing the hydraulic components, release the hydraulic oil pressure in the hydraulic circuit, particularly with the counterbalance valve on the cylinder.



## CONDUCTING A PRE-DELIVERY INSPECTION

When the machine owner/company changes, in addition to conducting a pre-delivery inspection, the corresponding inspection shall be carried out according to the maintenance schedule requirement and repair & inspection report. When conducting a pre-delivery inspection, comply with the following requirements:

- **1.** It is the responsibility of the machine owner/company to perform a pre-delivery inspection.
- 2. Follow this procedure each time before delivery. Performing a pre-delivery inspection could reveal potential problems with the machine before you begin putting the machine into service.
- **3.** Never use a damaged or malfunctioning machine. Tag the machine and do not use it.

- Only professionally trained, qualified personnel may repair the machine and must follow the procedures as stated in operation manual and maintenance manual.
- **5.** A competent operator must conduct daily maintenance on this machine as stated in *operation manual* and *maintenance manual*.

Before delivering the machine, complete the following record using these instructions:

- 1. Prepare the machine before delivery, which includes performing a pre-delivery inspection, following maintenance procedures and performing functional inspections.
- 2. Use the following table to note the results. After each section is complete, mark the appropriate box.
- Record the inspection results. If any inspection results are "NO", the machine must be stopped and re-inspected after repair is completed and marked in the box marked "inspection".

#### Table 9-1

PREPARE THE WORK RECORD BEFORE DELIVERY			
Model			
Serial No.			
Inspection Item	YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/Machine Has Been Repaired
Pre-operational Inspection			
Maintenance Procedure			
Functional Inspection			
Machine Buyer/ Renter			
Inspector Signature			
Inspector Title			
Inspector Company			

## FOLLOWING A MAINTENANCE SCHEDULE

Regular maintenance inspections must occur daily, quarterly, biannually (every 6 months) and annually, and must be performed by the personnel qualified in the maintenance and service of the machine models involved. Use the table to help you adhere to a routine maintenance schedule.

#### Table 9-2

INSPECTION INTERVAL	INSPECTION PROCEDURES
Every day or every 8 hours	Α
Every quarter or every 250 hours	A+B
Every half a year or every 500 hours	A+B+C
Every year or every 1000 hours	A+B+C+D



# COMPLETING A REPAIR & INSPECTION REPORT

- 1. The Repair & Inspection Report is divided into four parts (A, B, C and D) according to the time requirements of the maintenance schedule and the maintenance procedure requirements.
- **2.** The Repair & Inspection Report shall include the inspection table of each regular inspection.
- 3. Duplicate the Repair & Inspection Report template for each inspection. Store the completed tables for 10 years or until the machine is no longer in use or as required by machine owner/company/custodian.
- **4.** Use the following table to record the results. After one item is complete, mark the appropriate box.
- 5. If any inspection item is marked as "NO", the machine must be stopped and re-inspected after repair is completed and the box marked "-REPAIRED" shall be checked. Select the appropriate inspection procedure based on the inspection type.

#### Table 9-3

REPAIR & INSPECTION REPORT					
Model					
Serial No.					
Checklist A Procedur	res				
Items		YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/ Machine Has Been Repaired	Problem Description
A-1 Inspect All Manual	s				
A-2 Inspect All Decals					
A-3 Inspect Damaged, or Lost Parts	Loose				
A-4 Inspect Hydraulic ( Level	Oil				
A-5 Inspect Hydraulic ( Leakage	Oil				
A-6 Inspect Fuel Level					
A-7 Inspect Fuel Leaks	age				
A-8 Inspect Engine Oil	Level				
A-9 Inspect Coolant Le (water-cooled engine)	evel				
A-10 Inspect Engine B	elt				
A-11 Inspect Fuel Strai (fuel-water separator)	iner				
A-12 Inspect Cooling F	an				
A-13 Inspect Engine In System	ıtake				
A-14 Functional Tests					
A-15 Perform Maintena after 30 Days	ance				



REPAIR & INSPECTION REPORT				
A-16 Perform Oscillate Cylinder Exhausting				
Checklist B Procedures				
Items	YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/ Machine Has Been Repaired	Problem Description
B-1 Inspect and Replace Hydraulic Oil Tank Return Filter Element				
B-2 Inspect Rim, Tire and Fasteners				
B-3 Inspect Hydraulic Oil				
B-4 Inspect Cooling System				
B-5 Replace Fuel Strainer Element (fuel-water separator)				
B-6 Inspect Air filter of Hydraulic Tank				
B-7 Replace High-Pressure Filter Element				
B-8 Replace Air Filter Element of Engine				
B-9 Inspect Length and Angle Sensors				
B-10 Inspect Engine Exhaust System				
B-11 Inspect Drive Reducer Oil Level				
B-12 Inspect Slewing Reducer Oil Level				
B-13 Inspect Slewing Bearing Bolts				
B-14 Lubricate Slewing Bearing				
B-15 Inspect Platform Rotate Cylinder Fasteners				
B-16 Test Cylinder Drift				
B-17 Inspect Counterbalance Valve Locking				
B-18 Inspect Electrical Wiring				
B-19 Inspect the Battery				



	DEDAID 9 IN	CDECTION DE	OODT	
	REPAIR & IN	SPECTION REI	PORT	
B-20 Test Oscillate Outriggers				
B-21 Test Drive Speed				
B-22 Inspect Emergency Lowering				
B-23 Inspect Tilt Protection				
B-24 Test Braking Distance				
Checklist C Procedures				
Items	YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/ Machine Has Been Repaired	Problem Description
C-1 Replace Fuel Filter Element				
C-2 Inspect Boom Extend/ Retract Cables and Pulleys				
C-3 Replace Engine Oil				
C-4 Replace Engine Oil Filter				
C-5 Replace Hydraulic Tank Air Filter				
C-6 Inspect Weighing System				
	1			
Checklist D Procedures				
Items	YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/ Machine Has Been Repaired	Problem Description
D-1 Replace Drive Reducer Gear Oil				
D-2 Replace Slewing Reducer Gear Oil				
D-3 Replace Hydraulic Oil				
D-4 Replace Hydraulic Tank Suction Filter				
D-5 Replace Coolant and Coolant Hoses (water-cooled engine)				
D-6 Replace Fuel Hoses				
D-7 Inspect Boom Wear Pads				
	ı	ı	ı	ı
User				
Inspector Signature				



REPAIR & INSPECTION REPORT		
Inspection Date		
Inspector Title		
Inspector Company		

# MAJOR MODIFICATION AND REPAIR RECORD

- 1. A major modification/repair is a modification/repair made to all or part of a machine that affects the stability, strength or performance of the machine.
- 2. Each time the machine owner/company makes a major modification/repair to the machine, it should be documented using the form below. Keep the form properly until the machine is taken out of service, or as requested by the machine owner/company.
- **3.** Major modifications/repairs to the machine must be performed by a qualified service technician.
- 4. The machine must be inspected and verified after major modifications/repairs, with the inspection items including but not limited to all items in the maintenance and inspection report.
- 5. If the inspection result of each item in the Maintenance and Inspection Report is "YES", the "Machine Status after Modification/Repair" in the form will be "Good" and the machine can be used. If either inspection result is "NO", the machine must be re-inspected after the repair is completed until the machine is in "Good" condition before continuing to use the machine.

#### Table 9-4

	Major Modification and Repair Record						
Model							
Serial No.							
Date	Problem Description	Modification/Repair Item	Machine Status af- ter Change	Repairman's Company and Position	Repair- man Signature		





This Page Intentionally Left Blank

Use appropriate inspection methods to check that all decals are easy to identify and properly placed.

Replace any lost or damaged safety decals.

Clean safety decals with neutral soap and water. Do not use solvent-based cleaners, which can damage safety label materials.

Do not operate machines with missing decals/ nameplates.

### **WARNING**


#### **UNSAFE OPERATION HAZARD**



All safety labels must be legible to alert personnel of safety hazards. Replace any illegible or missing labels immediately. Safety labels removed during any repair work must be replaced in their original position before the engine is placed back into service. Do not operate the engine if there are missing or badly worn safety labels.



#### **DECALS/NAMEPLATE-GB**

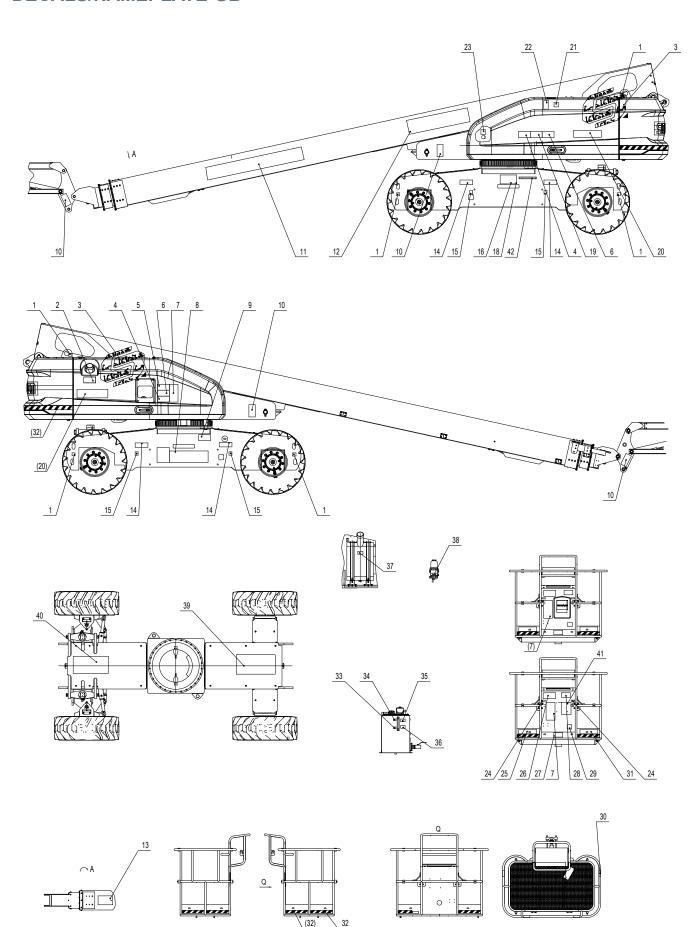




No.	Part No.	Description	Qty.	Remarks
	105064103001	Decals (GB)-TB26J Plus		
1	104011100002	Decal-Lifting points	6	
2	104011100014	Decal-Explosion hazard	1	
3	105045103002	LOGO-Symbol (large)	2	
4	104011100006	Decal-Bulkhead overhaul	2	
5	104011100013	Decal-Electrocution hazard	1	
6	104011100007	Decal-Tipping hazard	2	
7	104011100020	Decal-General safety instructions	2	
8	103003100004	Decal-Contact information	1	
9	104011100022	Decal-Turntable rotation lock	1	
10	104011100011	Decal-Crush hazard	4	
11	105057103001	LOGO-SINOBOOM (large)	1	
12	105064103005	Decal-TB26J Plus (large)	1	
13	104011100012	Decal-Fall hazard	1	
14	104011100001	Decal-Tipping hazard	4	
15	105064103008	Decal-Wheel load 9620kg	4	
16	105001100057	Nameplate-GB	1	
17	114006103012	Decal-QR code	1	
18	215050000012	Blind rivet 4×8-ZnD	4	
19	104011100005	Decal-Explosion hazard	1	
20	105064103004	Decal-TB26J Plus (small)	2	
21	104011100008	Decal-Noise of 82dB	1	
22	104011100018	Decal-Burn hazard	1	
23	104011100016	Decal-Emergency stop switch	1	
24	101048100014	Decal-Lashing point	2	
25	103007103002	Decal-Tipping hazard	1	
26	105021100003	Decal-Tipping hazard	1	
27	104011100019	Decal-Crush hazard	1	
28	104011100009	Decal-Read manuals	1	
29	104011100017	Decal-Foot switch	1	
30	104011100021	Decal-Crush hazard	4	
31	105046103004	Decal-Rated load of 454kg	1	
32	216060000002	Yellow & black hazard warning stripe tape	5	
33	104011100003	Decal-Hydraulic oil level	1	
34	104011100010	Decal-Hydraulic oil level	1	
35	104010100021	Decal-Hydraulic oil temperature range	1	



No.	Part No.	Description	Qty.	Remarks	
36	104009100018	Decal-Hydraulic oil marking	1		
37	104009100019	Decal-Diesel fuel marking	1		
38	104009100020	Decal-Oil-water separator	1		
39	105001100051	Decal-Direction marking	1		
40	105001100053	Decal-Direction marking	1		
41	105064103000	Decal-Range of motion chart	1		
42	Environmental label imprint position				



# **DECALS/NAMEPLATE (CE-METRIC)**

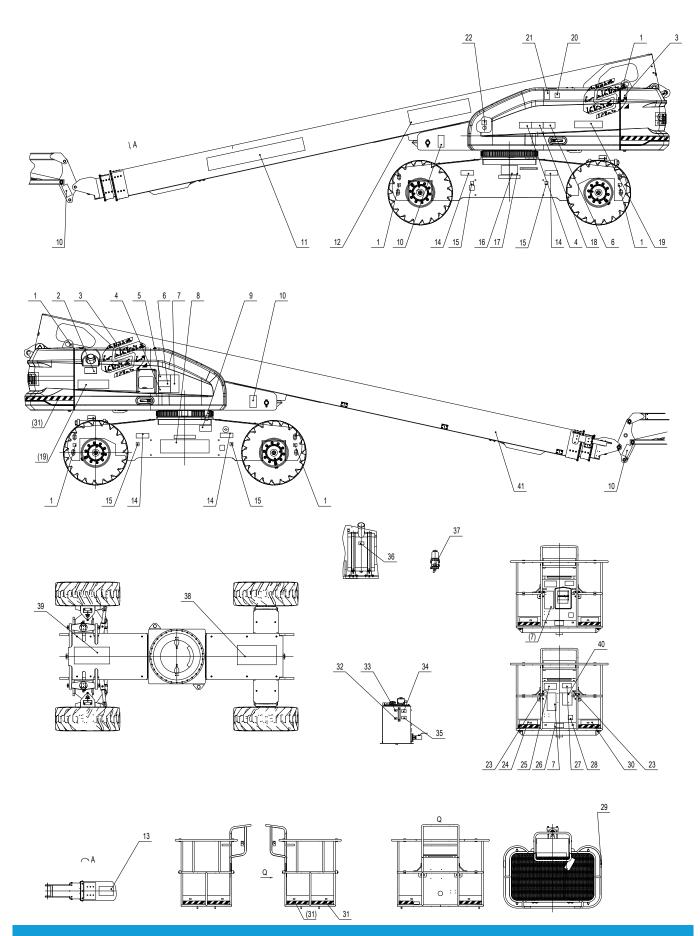



No.	Part No.	Description	Qty.	Remarks
	105064103003	Decals (CE-Metric)-TB26J Plus	1	
1	104011100002	Decal-Lifting points	6	
2	104011100014	Decal-Explosion hazard	1	
3	105045103002	LOGO-Symbol (large)	2	
4	104011100006	Decal-Bulkhead overhaul	2	
5	104011100013	Decal-Electrocution hazard	1	
6	104011100007	Decal-Tipping hazard	2	
7	104011100020	Decal-General safety instructions	2	
8	105001100050	Decal-Contact information	1	
9	104011100022	Decal-Turntable rotation lock	1	
10	104011100011	Decal-Crush hazard	4	
11	105057103001	LOGO-SINOBOOM (large)	1	
12	105064103005	Decal-TB26J Plus (large)	1	
13	104011100012	Decal-Fall hazard	1	
14	104011100001	Decal-Tipping hazard	4	
15	105064103008	Decal-Wheel load 9620kg	4	
16	103011103012	Nameplate-UKCA&CE (TB)	1	
17	215050000012	Blind rivet 4×8-ZnD	4	
18	104011100005	Decal-Explosion hazard	1	
19	105064103004	Decal-TB26J Plus (small)	2	
20	104011100008	Decal-Noise of 82dB	1	
21	104011100018	Decal-Burn hazard	1	
22	104011100016	Decal-Emergency stop switch	1	
23	101016100030	Decal-Lashing point	2	
24	103007103002	Decal-Tipping hazard	1	
25	105021100003	Decal-Tipping hazard	1	
26	104011100019	Decal-Crush hazard	1	
27	104011100009	Decal-Read manuals	1	
28	104011100017	Decal-Foot switch	1	
29	104011100021	Decal-Crush hazard	4	
30	105046103004	Decal-Rated load of 454kg	1	
31	216060000002	Yellow & black hazard warning stripe tape	5	
32	104011100003	Decal-Hydraulic oil level	1	
33	104011100010	Decal-Hydraulic oil level	1	
34	104010100021	Decal-Hydraulic oil temperature range	1	
35	104009100022	Decal-Hydraulic oil marking	1	




No.	Part No.	Description	Qty.	Remarks
36	104009100021	Decal-Diesel fuel marking	1	
37	104009100020	Decal-Oil-water separator	1	
38	105001100051	Decal-Direction marking	1	
39	105001100053	Decal-Direction marking	1	
40	105064103000	Decal-Range of motion chart	1	

TB26J Plus Operation Manual 10-7 © Nov. 2022



## **DECALS/NAMEPLATE (CE-IMPERIAL)**

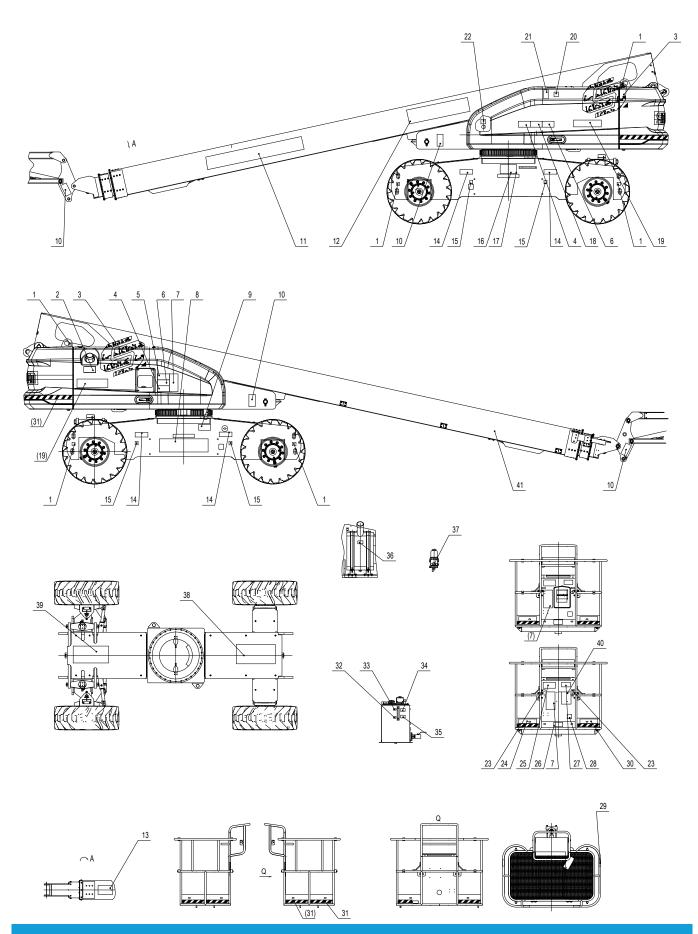




No.	Part No.	Description	Qty.	Remarks
	105064103010	Decals (CE-Imperial)-TB26J Plus	1	
1	104011100002	Decal-Lifting points	6	
2	104011100014	Decal-Explosion hazard	1	
3	105045103002	LOGO-Symbol (large)	2	
4	104011100006	Decal-Bulkhead overhaul	2	
5	104011100013	Decal-Electrocution hazard	1	
6	104011100007	Decal-Tipping hazard	2	
7	104011100020	Decal-General safety instructions	2	
8	105001100050	Decal-Contact information	1	
9	104011100022	Decal-Turntable rotation lock	1	
10	104011100011	Decal-Crush hazard		
11	105057103001	LOGO-SINOBOOM (large)	1	
12	105064103007	Decal-TB860J Plus (large)	1	
13	104011100012	Decal-Fall hazard	1	
14	104011100001	Decal-Tipping hazard	4	
15	105064103008	Decal-Wheel load 9620kg	4	
16	103011103012	Nameplate-UKCA&CE (TB)	1	
17	215050000012	Blind rivet 4×8-ZnD	4	
18	104011100005	Decal-Explosion hazard	1	
19	105064103006	Decal-TB860J Plus (small)	2	
20	104011100008	Decal-Noise of 82dB	1	
21	104011100018	Decal-Burn hazard	1	
22	104011100016	Decal-Emergency stop switch	1	
23	101016100030	Decal-Lashing point	2	
24	103007103002	Decal-Tipping hazard	1	
25	105021100003	Decal-Tipping hazard	1	
26	104011100019	Decal-Crush hazard	1	
27	104011100009	Decal-Read manuals	1	
28	104011100017	Decal-Foot switch	1	
29	104011100021	Decal-Crush hazard	4	
30	105046103004	Decal-Rated load of 454kg	1	
31	216060000002	Yellow & black hazard warning stripe tape	5	
32	104011100003	Decal-Hydraulic oil level	1	
33	104011100010	Decal-Hydraulic oil level	1	
34	104010100021	Decal-Hydraulic oil temperature range	1	
35	104009100022	Decal-Hydraulic oil marking	1	




No.	Part No.	Description	Qty.	Remarks
36	104009100021	Decal-Diesel fuel marking	1	
37	104009100020	Decal-Oil-water separator	1	
38	105001100051	Decal-Direction marking	1	
39	105001100053	Decal-Direction marking	1	
40	105064103000	Decal-Range of motion chart	1	



## **DECALS/NAMEPLATE (ANSI)**

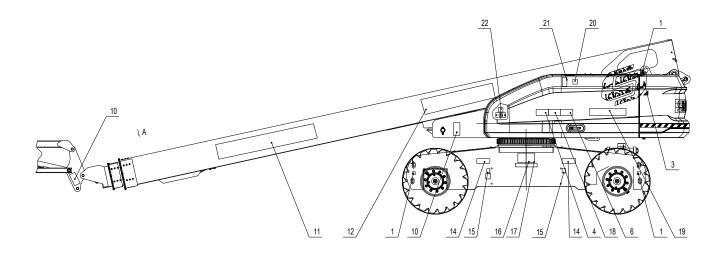

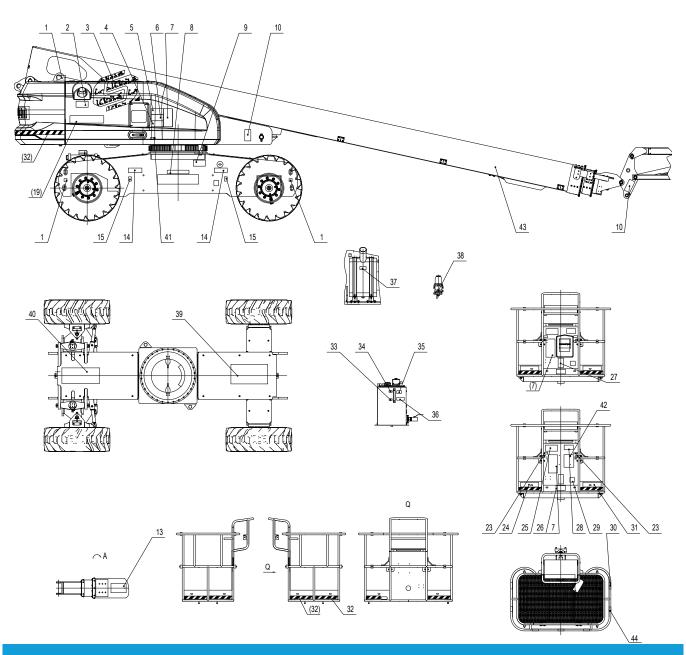



No.	Part No.	Description	Qty.	Remarks
	105064103002	Decals (ANSI)-TB26J Plus	1	
1	104011100002	Decal-Lifting points	6	
2	104011100014	Decal-Explosion hazard	1	
3	105045103002	LOGO-Symbol (large)	2	
4	104011100006	Decal-Bulkhead overhaul	2	
5	104011100013	Decal-Electrocution hazard	1	
6	104011100007	Decal-Tipping hazard	2	
7	104011100020	Decal-General safety instructions	2	
8	105001100050	Decal-Contact information	1	
9	104011100022	Decal-Turntable rotation lock	1	
10	104011100011	Decal-Crush hazard	4	
11	105057103001	LOGO-SINOBOOM (large)	1	
12	105064103007	Decal-TB860J Plus (large)	1	
13	104011100012	Decal-Fall hazard	1	
14	104011100001	Decal-Tipping hazard	4	
15	105064103009	Decal-Wheel load 9620kg (Imperial)	4	
16	103004103004	Nameplate-ANSI&CSA (TB)	1	
17	215050000012	Blind rivet 4×8-ZnD	4	
18	104011100005	Decal-Explosion hazard	1	
19	105064103006	Decal-TB860J Plus (small)	2	
20	104011100008	Decal-Noise of 82dB	1	
21	104011100018	Decal-Burn hazard	1	
22	104011100016	Decal-Emergency stop switch	1	
23	101016100030	Decal-Lashing point	2	
24	103007103002	Decal-Tipping hazard	1	
25	105021100003	Decal-Tipping hazard	1	
26	104011100019	Decal-Crush hazard	1	
27	105029103023	Decal-Operation instructions	1	
28	104011100009	Decal-Read manuals	1	
29	104011100017	Decal-Foot switch	1	
30	104011100021	Decal-Crush hazard	4	
31	105046103004	Decal-Rated load of 454kg	1	
32	216060000002	Yellow & black hazard warning stripe tape	5	
33	104011100003	Decal-Hydraulic oil level	1	
34	104011100010	Decal-Hydraulic oil level	1	
35	104010100021	Decal-Hydraulic oil temperature range	1	





No.	Part No.	Description		Remarks
36	104009100022	Decal-Hydraulic oil marking	1	
37	104009100021	Decal-Diesel fuel marking	1	
38	104009100020	Decal-Oil-water separator	1	
39	105001100051	Decal-Direction marking	1	
40	105001100053	Decal-Direction marking	1	
41	101040103015	Decal-Annual inspection date	1	
42	105064103000	Decal-Range of motion chart	1	
44	103010103014	Decal-Non-insulated	3	

TB26J Plus Operation Manual 10-13 © Nov. 2022



## **DECALS/NAMEPLATES (CSA)**

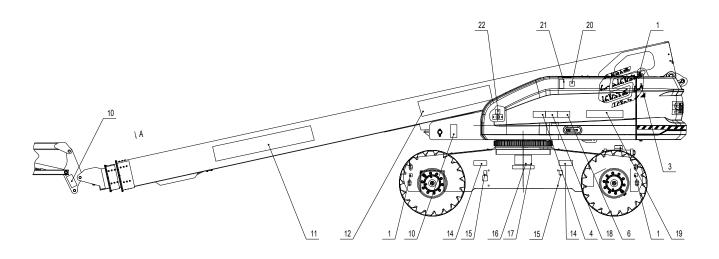

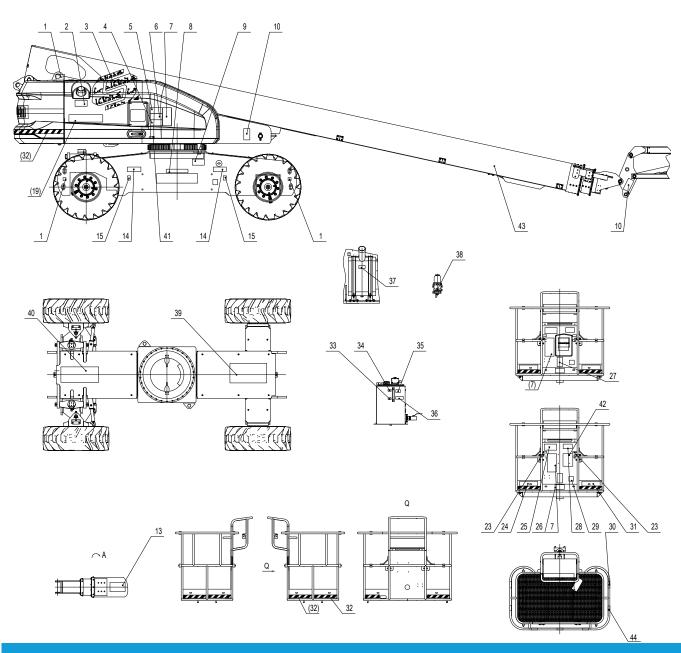




No.	Part No.	Description	Qty.	Remarks
	105064103012	Decals (CSA)-TB26P Plus	1	
1	104011100002	Decal-Lifting points	6	
2	104011100014	Decal-Explosion hazard	1	
3	105045103002	LOGO-Symbol (large)	2	
4	104011100006	Decal-Bulkhead overhaul	2	
5	104011100013	Decal-Electrocution hazard	1	
6	104011100007	Decal-Tipping hazard	2	
7	104011100020	Decal-General safety instructions	2	
8	105001100050	Decal-Contact information	1	
9	104011100022	Decal-Turntable rotation lock	1	
10	104011100011	Decal-Crush hazard	4	
11	105057103001	LOGO-SINOBOOM (large)	1	
12	105064103007	Decal-TB860J Plus (large)	1	
13	104011100012	Decal-Fall hazard	1	
14	104011100001	Decal-Tipping hazard	4	
15	105064103009	Decal-Wheel load 9620kg (Imperial)	4	
16	103004103004	Nameplate-ANSI&CSA (TB)	1	
17	215050000012	Blind rivet 4×8-ZnD	4	
18	104011100005	Decal-Explosion hazard	1	
19	105064103006	Decal-TB860J Plus (small)	2	
20	104011100008	Decal-Noise of 82dB	1	
21	104011100018	Decal-Burn hazard	1	
22	104011100016	Decal-Emergency stop switch	1	
23	101016100030	Decal-Lashing point	2	
24	103007103002	Decal-Tipping hazard	1	
25	105021100003	Decal-Tipping hazard	1	
26	104011100019	Decal-Crush hazard	1	
27	105029103023	Decal-Operation instructions	1	
28	104011100009	Decal-Read manuals	1	
29	104011100017	Decal-Foot switch	1	
30	104011100021	Decal-Crush hazard	4	
31	105046103004	Decal-Rated load of 454kg	1	
32	216060000002	Yellow & black hazard warning stripe tape	5	
33	104011100003	Decal-Hydraulic oil level	1	
34	104011100010	Decal-Hydraulic oil level	1	



No.	Part No.	Description	Qty.	Remarks
36	104009100022	Decal-Hydraulic oil marking	1	
37	104009100021	Decal-Diesel fuel marking	1	
38	104009100020	Decal-Oil-water separator	1	
39	105001100051	Decal-Direction marking	1	
40	105001100053	Decal-Direction marking	1	
41	101040103015	Decal-Annual inspection date	1	
42	105064103000	Decal-Range of motion chart	1	
44	103010103014	Decal-Non-insulated	3	



### **DECALS/NAMEPLATE (AS)**

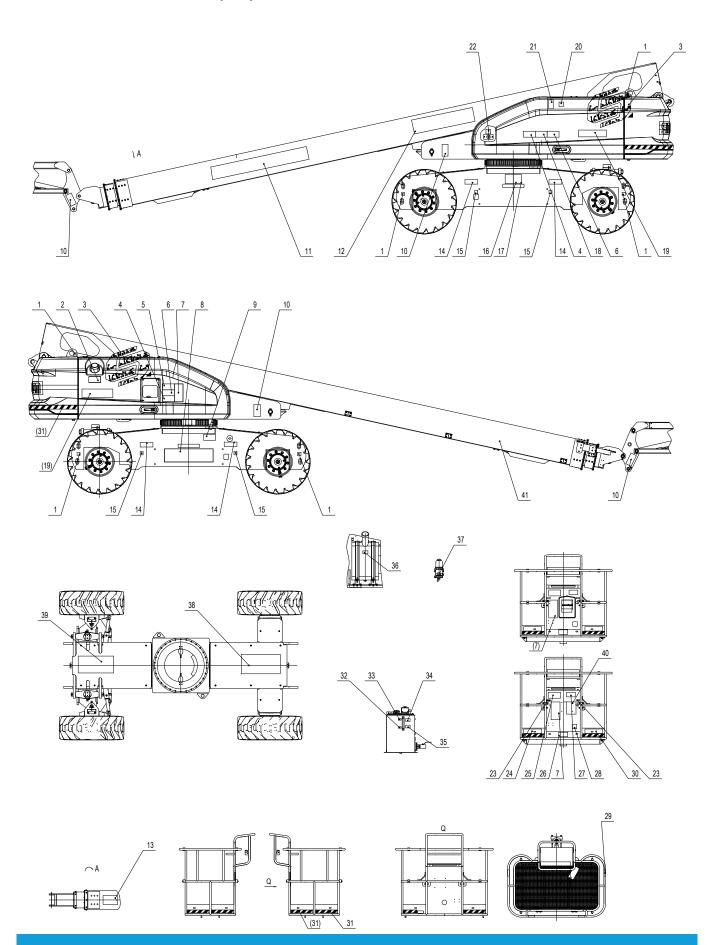



105064103014   Decals (AS)-TB26J Plus	No.	Part No.	Description	Qty.	Remarks
2 104011100014 Decal-Explosion hazard 1 3 105045103002 LOGO-White sticker 2 4 104011100016 Decal-Bulkhead overhaul 2 5 104011100013 Decal-Eterocution hazard 1 6 104011100007 Decal-Tipping hazard 2 7 104011100020 Decal-Centeat Information 1 9 104011100020 Decal-Contact Information 1 1 1 105057103001 Decal-Contact Information 1 11 105057103001 LOGG-SINOBOOM (big) 1 12 105064103005 Decal-Tipping hazard 1 13 104011100012 Decal-Tipping hazard 1 14 104011100012 Decal-Tipping hazard 1 15 105064103005 Decal-Tipping hazard 1 16 105064103006 Decal-Max. load of fire to ground 9620kg 4 16 105064503004 Nameplates AS (TB) 1 17 215050000012 Billind rivet 4×8-ZnD 4 18 104011100005 Decal-Explosion hazard 1 19 105064103004 Decal-Explosion hazard 1 19 105064103004 Decal-Explosion hazard 1 10 104011100018 Decal-Explosion hazard 1 10 104011100019 Decal-Explosion hazard 1 1 104011100019 Decal-Explosion hazard 1 1 104011100019 Decal-Explosion hazard 1 22 104011100019 Decal-Explosion hazard 1 23 10101610003 Decal-Explosion hazard 1 24 103007103002 Decal-Explosion hazard 1 25 10502110003 Decal-Explosion hazard 1 26 104011100019 Decal-Explosion hazard 1 27 104011100019 Decal-Explosion hazard 1 28 104011100019 Decal-Explosion hazard 1 29 104011100019 Decal-Explosion hazard 1 20 104011100019 Decal-Explosion hazard 1 21 104011100019 Decal-Explosion hazard 1 22 104011100019 Decal-Explosion hazard 1 23 104011100010 Decal-Explosion hazard 1 24 104011100010 Decal-Explosion hazard 1 25 10502110003 Decal-Explosion hazard 1 26 104011100011 Decal-Explosion hazard 1		105064103014	Decals (AS)-TB26J Plus	1	
3	1	104011100002	Decal-Lifting points	6	
4         104011100006         Decal-Bulkhead overhaul         2           5         104011100013         Decal-Electrocution hazard         1           6         104011100007         Decal-Tipping hazard         2           7         104011100020         Decal-Ceneral safety         2           8         105001100050         Decal-Crush cinformation         1           9         104011100012         Decal-Turntable rotation lock         1           10         104011100011         Decal-Crush hazard         4           11         105064103005         Decal-TB26J Plus (big)         1           12         105064103005         Decal-TB26J Plus (big)         1           13         104011100012         Decal-TB26J Plus (big)         1           14         104011100012         Decal-TB26J Plus (big)         1           15         105064103008         Decal-TB26J Plus (big)         1           16         1050645030004         Nameplates AS (TB)         1           17         215050000012         Blind rivet 4×8-ZnD         4           18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-TB26J Plus (small)         2	2	104011100014	Decal-Explosion hazard	Decal-Explosion hazard 1	
5         104011100013         Decal-Electrocution hazard         1           6         104011100007         Decal-Tipping hazard         2           7         104011100020         Decal-General safety         2           8         105001100050         Decal-Contact information         1           9         104011100011         Decal-Crush hazard         4           10         104011100011         Decal-Crush hazard         4           11         105057103001         LOGO-SINOBOOM (big)         1           12         105064103005         Decal-TB26J Plus (big)         1           13         104011100012         Decal-Fall hazard         1           14         104011100010         Decal-Fall hazard         1           15         105064103008         Decal-Max. load of tire to ground 9620kg         4           16         105045103004         Nameplates AS (TB)         1           17         215050000012         Blind rivet 4*8-ZnD         4           18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-TB26J Plus (small)         2           20         104011100008         Decal-Rbana hazard         1	3	105045103002	LOGO-White sticker	2	
6         104011100007         Decal-Tipping hazard         2           7         104011100020         Decal-General safety         2           8         105001100050         Decal-Contact information         1           9         104011100022         Decal-Turntable rotation lock         1           10         104011100011         Decal-Crush hazard         4           11         105057103001         LOGO-SINOBOOM (big)         1           12         105064103005         Decal-TBL (big)         1           13         104011100012         Decal-Fall hazard         1           14         104011100001         Decal-Tipping hazard         4           15         105064103008         Decal-Max. load of tire to ground 9620kg         4           16         105045103004         Nameplates AS (TB)         1           17         215050000012         Bilind rivet 4×8-ZnD         4           18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-Explosion hazard         1           20         104011100008         Decal-Emergency stop switch         1           21         104011100018         Decal-Emergency stop switch         1	4	104011100006	Decal-Bulkhead overhaul	2	
Tourish   Tour	5	104011100013	Decal-Electrocution hazard	1	
8         105001100050         Decal-Contact information         1           9         104011100022         Decal-Turntable rotation lock         1           10         104011100011         Decal-Crush hazard         4           11         105057103001         LOGO-SINOBOOM (big)         1           12         105064103005         Decal-TB26J Plus (big)         1           13         104011100012         Decal-Fall hazard         1           14         104011100001         Decal-Fall hazard         4           15         105064103008         Decal-Max. load of tire to ground 9620kg         4           16         105045103004         Nameplates AS (TB)         1           17         215050000012         Blind rivet 4×8-ZnD         4           18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-ED26J Plus (small)         2           20         104011100008         Decal-Burn hazard         1           21         104011100018         Decal-Emergency stop switch         1           22         104011100016         Decal-Emaryard anchorage points         2           24         103007103002         Decal-Tipping hazard         1<	6	104011100007	Decal-Tipping hazard	2	
9         104011100022         Decal-Turntable rotation lock         1           10         104011100011         Decal-Crush hazard         4           11         105057103001         LOGO-SINOBOOM (big)         1           12         105064103005         Decal-TB26J Plus (big)         1           13         104011100012         Decal-Fall hazard         1           14         104011100001         Decal-Fall hazard         4           15         105064103008         Decal-Max. load of tire to ground 9620kg         4           16         105045103004         Nameplates AS (TB)         1           17         215050000012         Blind rivet 4×8-ZnD         4           18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-Explosion hazard         1           20         104011100008         Decal-Burn hazard         1           21         104011100018         Decal-Burn hazard         1           22         104011100016         Decal-Emergency stop switch         1           23         101016100030         Decal-Lanyard anchorage points         2           24         103007103002         Decal-Tipping hazard         1     <	7	104011100020	Decal-General safety	2	
10	8	105001100050	Decal-Contact information	1	
11         105057103001         LOGO-SINOBOOM (big)         1           12         105064103005         Decal-TB26J Plus (big)         1           13         104011100012         Decal-Fall hazard         1           14         104011100001         Decal-Tipping hazard         4           15         105064103008         Decal-Max. load of tire to ground 9620kg         4           16         105045103004         Nameplates AS (TB)         1           17         215050000012         Blind rivet 4×8-ZnD         4           18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-Explosion hazard         1           20         104011100008         Decal-TB26J Plus (small)         2           21         104011100018         Decal-Noise 82dB         1           21         104011100018         Decal-Emergency stop switch         1           22         104011100018         Decal-Emergency stop switch         1           23         101016100030         Decal-Emergency stop switch         1           24         103007103002         Decal-Tipping hazard         1           25         105021100003         Decal-Tipping hazard         1 <td>9</td> <td>104011100022</td> <td>Decal-Turntable rotation lock</td> <td>1</td> <td></td>	9	104011100022	Decal-Turntable rotation lock	1	
12 105064103005 Decal-TB26J Plus (big) 1 13 104011100012 Decal-Fall hazard 1 14 104011100001 Decal-Tipping hazard 4 15 105064103008 Decal-Max. load of tire to ground 9620kg 4 16 105045103004 Nameplates AS (TB) 1 17 215050000012 Blind rivet 4×8-ZnD 4 18 104011100005 Decal-Explosion hazard 1 19 105064103004 Decal-Explosion hazard 1 19 105064103004 Decal-Burn hazard 1 20 104011100008 Decal-Burn hazard 1 21 104011100018 Decal-Emergency stop switch 1 23 101016100030 Decal-Lanyard anchorage points 2 24 103007103002 Decal-Tipping hazard 1 25 105021100003 Decal-Tipping hazard 1 26 104011100019 Decal-Crush hazard 1 27 104011100019 Decal-Crush hazard 1 28 104011100017 Decal-Foot switch 1 29 104011100017 Decal-Foot switch 1 29 104011100017 Decal-Foot switch 1 30 105046103004 Decal-Rated load 454kg 1 31 216060000002 Yellow-black caution stripe 4 32 104011100001 Decal-Hydraulic oil level 1 33 104011100001 Decal-Hydraulic oil level 1 34 104010100021 Decal-Hydraulic oil temperature range 1	10	104011100011	Decal-Crush hazard	4	
13         104011100012         Decal-Fall hazard         1           14         104011100001         Decal-Tipping hazard         4           15         105064103008         Decal-Max. load of tire to ground 9620kg         4           16         105045103004         Nameplates AS (TB)         1           17         215050000012         Blind rivet 4×8-ZnD         4           18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-Explosion hazard         1           20         104011100008         Decal-Noise 82dB         1           21         104011100018         Decal-Burn hazard         1           22         104011100016         Decal-Emergency stop switch         1           23         101016100030         Decal-Lanyard anchorage points         2           24         103007103002         Decal-Tipping hazard         1           25         105021100003         Decal-Crush hazard         1           26         104011100019         Decal-Foot switch         1           27         104011100009         Decal-Foot switch         1           29         104011100001         Decal-Rated load 454kg         1 <t< td=""><td>11</td><td>105057103001</td><td>LOGO-SINOBOOM (big)</td><td>1</td><td></td></t<>	11	105057103001	LOGO-SINOBOOM (big)	1	
14         104011100001         Decal-Tipping hazard         4           15         105064103008         Decal-Max. load of tire to ground 9620kg         4           16         105045103004         Nameplates AS (TB)         1           17         215050000012         Blind rivet 4×8-ZnD         4           18         10401110005         Decal-Explosion hazard         1           19         105064103004         Decal-Explosion hazard         1           20         104011100018         Decal-Horise 82dB         1           21         104011100018         Decal-Burn hazard         1           22         104011100016         Decal-Emergency stop switch         1           23         101016100030         Decal-Lanyard anchorage points         2           24         103007103002         Decal-Tipping hazard         1           25         105021100003         Decal-Tipping hazard         1           26         104011100019         Decal-Crush hazard         1           27         104011100019         Decal-Read manuals         1           28         104011100017         Decal-Foot switch         1           29         104011100021         Decal-Rated load 454kg         1	12	105064103005	Decal-TB26J Plus (big)	1	
15         105064103008         Decal-Max. load of tire to ground 9620kg         4           16         105045103004         Nameplates AS (TB)         1           17         215050000012         Blind rivet 4×8-ZnD         4           18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-Bus (small)         2           20         104011100008         Decal-Roise 82dB         1           21         104011100018         Decal-Burn hazard         1           22         104011100016         Decal-Emergency stop switch         1           23         101016100030         Decal-Lanyard anchorage points         2           24         103007103002         Decal-Tipping hazard         1           25         105021100003         Decal-Tipping hazard         1           26         104011100019         Decal-Crush hazard         1           27         104011100019         Decal-Read manuals         1           28         104011100017         Decal-Foot switch         1           29         104011100021         Decal-Rated load 454kg         1           31         216060000002         Yellow-black caution stripe         4	13	104011100012	Decal-Fall hazard	1	
16         105045103004         Nameplates AS (TB)         1           17         215050000012         Blind rivet 4×8-ZnD         4           18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-TB26J Plus (small)         2           20         104011100008         Decal-Noise 82dB         1           21         104011100018         Decal-Burn hazard         1           22         104011100016         Decal-Emergency stop switch         1           23         101016100030         Decal-Lanyard anchorage points         2           24         103007103002         Decal-Tipping hazard         1           25         105021100003         Decal-Tipping hazard         1           26         104011100019         Decal-Crush hazard         1           27         104011100009         Decal-Read manuals         1           28         104011100017         Decal-Foot switch         1           29         104011100021         Decal-Rated load 454kg         1           30         105046103004         Decal-Rated load 454kg         1           31         216060000002         Yellow-black caution stripe         4	14	104011100001	Decal-Tipping hazard	4	
17       215050000012       Blind rivet 4×8-ZnD       4         18       104011100005       Decal-Explosion hazard       1         19       105064103004       Decal-TB26J Plus (small)       2         20       104011100008       Decal-Noise 82dB       1         21       104011100018       Decal-Burn hazard       1         22       104011100016       Decal-Emergency stop switch       1         23       101016100030       Decal-Lanyard anchorage points       2         24       103007103002       Decal-Tipping hazard       1         25       105021100003       Decal-Tipping hazard       1         26       104011100019       Decal-Crush hazard       1         27       104011100009       Decal-Read manuals       1         28       104011100017       Decal-Foot switch       1         29       104011100021       Decal-Read load 454kg       1         30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100001       Decal-Hydraulic oil temperature range       1 <td>15</td> <td>105064103008</td> <td>Decal-Max. load of tire to ground 9620kg</td> <td>4</td> <td></td>	15	105064103008	Decal-Max. load of tire to ground 9620kg	4	
18         104011100005         Decal-Explosion hazard         1           19         105064103004         Decal-TB26J Plus (small)         2           20         104011100008         Decal-Noise 82dB         1           21         104011100018         Decal-Burn hazard         1           22         104011100016         Decal-Emergency stop switch         1           23         101016100030         Decal-Lanyard anchorage points         2           24         103007103002         Decal-Tipping hazard         1           25         105021100003         Decal-Tipping hazard         1           26         104011100019         Decal-Crush hazard         1           27         104011100009         Decal-Read manuals         1           28         104011100017         Decal-Foot switch         1           29         104011100021         Decal-Crush hazard         4           30         105046103004         Decal-Rated load 454kg         1           31         216060000002         Yellow-black caution stripe         4           32         104011100003         Decal-Hydraulic oil level         1           33         1040111000010         Decal-Hydraulic oil temperature range         1	16	105045103004	Nameplates AS (TB)	1	
19         105064103004         Decal-TB26J Plus (small)         2           20         104011100008         Decal-Noise 82dB         1           21         104011100018         Decal-Burn hazard         1           22         104011100016         Decal-Emergency stop switch         1           23         101016100030         Decal-Lanyard anchorage points         2           24         103007103002         Decal-Tipping hazard         1           25         105021100003         Decal-Tipping hazard         1           26         104011100019         Decal-Crush hazard         1           27         104011100009         Decal-Read manuals         1           28         104011100017         Decal-Foot switch         1           29         104011100021         Decal-Crush hazard         4           30         105046103004         Decal-Rated load 454kg         1           31         216060000002         Yellow-black caution stripe         4           32         104011100003         Decal-Hydraulic oil level         1           33         104011100010         Decal-Hydraulic oil level         1           34         104010100021         Decal-Hydraulic oil temperature range         1 <td>17</td> <td>215050000012</td> <td>Blind rivet 4×8-ZnD</td> <td>4</td> <td></td>	17	215050000012	Blind rivet 4×8-ZnD	4	
20         104011100008         Decal-Noise 82dB         1           21         104011100018         Decal-Burn hazard         1           22         104011100016         Decal-Emergency stop switch         1           23         101016100030         Decal-Lanyard anchorage points         2           24         103007103002         Decal-Tipping hazard         1           25         105021100003         Decal-Tipping hazard         1           26         104011100019         Decal-Crush hazard         1           27         104011100009         Decal-Read manuals         1           28         104011100017         Decal-Foot switch         1           29         104011100021         Decal-Crush hazard         4           30         105046103004         Decal-Rated load 454kg         1           31         216060000002         Yellow-black caution stripe         4           32         104011100003         Decal-Hydraulic oil level         1           33         104011100010         Decal-Hydraulic oil level         1           34         104010100021         Decal-Hydraulic oil temperature range         1	18	104011100005	Decal-Explosion hazard	1	
21       104011100018       Decal-Burn hazard       1         22       104011100016       Decal-Emergency stop switch       1         23       101016100030       Decal-Lanyard anchorage points       2         24       103007103002       Decal-Tipping hazard       1         25       105021100003       Decal-Tipping hazard       1         26       104011100019       Decal-Crush hazard       1         27       10401110009       Decal-Read manuals       1         28       104011100017       Decal-Foot switch       1         29       104011100021       Decal-Crush hazard       4         30       105046103004       Decal-Read load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	19	105064103004	Decal-TB26J Plus (small)	2	
22       104011100016       Decal-Emergency stop switch       1         23       101016100030       Decal-Lanyard anchorage points       2         24       103007103002       Decal-Tipping hazard       1         25       105021100003       Decal-Tipping hazard       1         26       104011100019       Decal-Crush hazard       1         27       104011100009       Decal-Read manuals       1         28       104011100017       Decal-Foot switch       1         29       104011100021       Decal-Crush hazard       4         30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	20	104011100008	Decal-Noise 82dB	1	
23       101016100030       Decal-Lanyard anchorage points       2         24       103007103002       Decal-Tipping hazard       1         25       105021100003       Decal-Tipping hazard       1         26       104011100019       Decal-Crush hazard       1         27       104011100009       Decal-Read manuals       1         28       104011100017       Decal-Foot switch       1         29       104011100021       Decal-Crush hazard       4         30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	21	104011100018	Decal-Burn hazard	1	
24       103007103002       Decal-Tipping hazard       1         25       105021100003       Decal-Tipping hazard       1         26       104011100019       Decal-Crush hazard       1         27       104011100009       Decal-Read manuals       1         28       104011100017       Decal-Foot switch       1         29       104011100021       Decal-Crush hazard       4         30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	22	104011100016	Decal-Emergency stop switch	1	
25       105021100003       Decal-Tipping hazard       1         26       104011100019       Decal-Crush hazard       1         27       104011100009       Decal-Read manuals       1         28       104011100017       Decal-Foot switch       1         29       104011100021       Decal-Crush hazard       4         30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	23	101016100030	Decal-Lanyard anchorage points	2	
26       104011100019       Decal-Crush hazard       1         27       104011100009       Decal-Read manuals       1         28       104011100017       Decal-Foot switch       1         29       104011100021       Decal-Crush hazard       4         30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	24	103007103002	Decal-Tipping hazard	1	
27       104011100009       Decal-Read manuals       1         28       104011100017       Decal-Foot switch       1         29       104011100021       Decal-Crush hazard       4         30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	25	105021100003	Decal-Tipping hazard	1	
28       104011100017       Decal-Foot switch       1         29       104011100021       Decal-Crush hazard       4         30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	26	104011100019	Decal-Crush hazard	1	
29       104011100021       Decal-Crush hazard       4         30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	27	104011100009	Decal-Read manuals	1	
30       105046103004       Decal-Rated load 454kg       1         31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	28	104011100017	Decal-Foot switch	1	
31       216060000002       Yellow-black caution stripe       4         32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	29	104011100021	Decal-Crush hazard	4	
32       104011100003       Decal-Hydraulic oil level       1         33       104011100010       Decal-Hydraulic oil level       1         34       104010100021       Decal-Hydraulic oil temperature range       1	30	105046103004	Decal-Rated load 454kg	1	
33         104011100010         Decal-Hydraulic oil level         1           34         104010100021         Decal-Hydraulic oil temperature range         1	31	216060000002	Yellow-black caution stripe	4	
34 104010100021 Decal-Hydraulic oil temperature range 1	32	104011100003	Decal-Hydraulic oil level	1	
34 104010100021 Decal-Hydraulic oil temperature range 1	33	104011100010	Decal-Hydraulic oil level	1	
	34		Decal-Hydraulic oil temperature range	1	
	35		Decal-Hydraulic oil		



No.	Part No.	Description		Remarks
36	104009100021	Decal-Diesel fuels	1	
37	104009100020	Decal-Fuel-water separator	1	
38	105001100051	Decal-Direction marking	1	
39	105001100053	Decal-Direction marking	1	
40	105064103000	Decal-Range of motion chart	1	


TB26J Plus Operation Manual 10-19 © Nov. 2022



This Page Intentionally Left Blank

# APPENDIX 1: SYMBOLS AND DESCRIPTION

#### SYMBOLS CHART

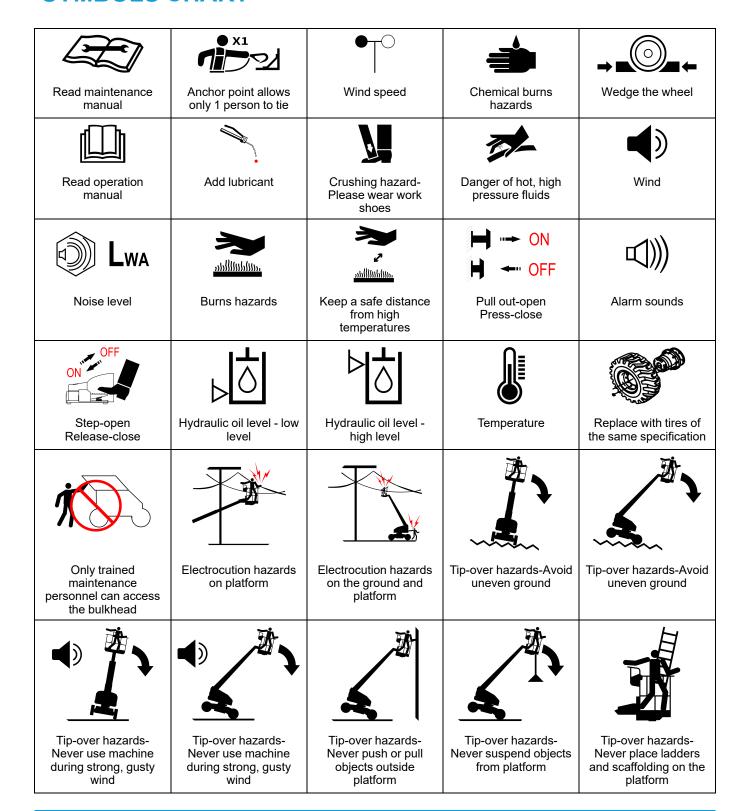





# APPENDIX 2: PREPARE THE WORK RECORD BEFORE DELIVERY

PREPARE THE WORK RECORD BEFORE DELIVERY					
Model					
Serial No.					
Inspection Item	YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/Machine Has Been Repaired		
Pre-operational Inspection					
Maintenance Procedure					
Functional Inspection					
Machine Buyer/ Renter					
Inspector Signature					
Inspector Title					
Inspector Company					

#### NOTE:

- **1.** Prepare the machine before delivery, which includes performing a pre-delivery inspection, following maintenance procedures and performing functional inspections.
- 2. Use the table to record the results. After each section is complete, mark the appropriate box.
- **3.** Record the inspection results. If any inspection result is "NO", the machine must be stopped, and then reinspected after repair is completed, and the box marked "REPAIRED" shall be checked.



This Page Intentionally Left Blank

# **APPENDIX 3: REPAIR & INSPECTION REPORT**

	REPAIR & IN	SPECTION REI	PORT	
Model				
Serial No.				
Checklist A Procedures				
Items	YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/ Machine Has Been Repaired	Problem Description
A-1 Inspect All Manuals				
A-2 Inspect All Decals				
A-3 Inspect Damaged, Loose or Lost Parts				
A-4 Inspect Hydraulic Oil Level				
A-5 Inspect Hydraulic Oil Leakage				
A-6 Inspect Fuel Level				
A-7 Inspect Fuel Leakage				
A-8 Inspect Engine Oil Level				
A-9 Inspect Coolant Level ( water-cooled engine )				
A-10 Inspect Engine Belt				
A-11 Inspect Fuel Strainer (fuel-water separator)				
A-12 Inspect Cooling Fan				
A-13 Inspect Engine Intake System				
A-14 Functional Tests				
A-15 Perform Maintenance after 30 Days				
A-16 Perform Oscillate Cylinder Exhausting				
Checklist B Procedures				
Items	YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/ Machine Has Been Repaired	Problem Description



	REPAIR & IN	SPECTION REI	PORT	
B-1 Inspect and Replace Hydraulic Oil Tank Return Filter Element				
B-2 Inspect Rim, Tire and Fasteners				
B-3 Inspect Hydraulic Oil				
B-4 Inspect Cooling System				
B-5 Replace Fuel Strainer Element (fuel-water separator)				
B-6 Inspect Air filter of Hydraulic Tank				
B-7 Replace High-Pressure Filter Element				
B-8 Replace Air Filter Element of Engine				
B-9 Inspect Length and Angle Sensors				
B-10 Inspect Engine Exhaust System				
B-11 Inspect Drive Reducer Oil Level				
B-12 Inspect Slewing Reducer Oil Level				
B-13 Inspect Slewing Bearing Bolts				
B-14 Lubricate Slewing Bearing				
B-15Inspect Platform Rotate Cylinder Fasteners				
B-16 Test Cylinder Drift				
B-17 Inspect Counterbalance Valve Locking				
B-18 Inspect Electrical Wiring				
B-19 Inspect the Battery				
B-20 Test Oscillate Outriggers				
B-21 Test Drive Speed				
B-22 Inspect Emergency Lowering				
B-23 Inspect Tilt Protection				
B-24 Test Braking Distance				



	REPAIR & IN	SPECTION REI	PORT	
Checklist C Procedures				
Items	YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/ Machine Has Been Repaired	Problem Description
C-1 Replace Fuel Filter Element				
C-2 Inspect Boom Extend/ Retract Cables and Pulleys				
C-3 Replace Engine Oil				
C-4 Replace Engine Oil Filter				
C-5 Replace Hydraulic Tank Air Filter				
C-6 Inspect Weighing System				
Checklist D Procedures				
Items	YES/Machine is in Good Condition	NO/Machine Has Damage or Malfunction	REPAIRED/ Machine Has Been Repaired	Problem Description
D-1 Replace Drive Reducer Gear Oil				
D-2 Replace Slewing Reducer Gear Oil				
D-3 Replace Hydraulic Oil				
D-4 Replace Hydraulic Tank Suction Filter				
D-5 Replace Coolant and Coolant Hoses (water-cooled engine)				
D-6 Replace Fuel Hoses				
D-7 Inspect Boom Wear Pads				
User				
Inspector Signature				
Inspection Date				
Inspector Title				



#### **REPAIR & INSPECTION REPORT**

Inspector Company

#### Note:

- 1. The Repair & Inspection Report shall include the inspection table of each regular inspection.
- 2. Duplicate the Repair & Inspection Report template for each inspection. Store the completed tables for 10 years or until the machine is no longer in use or as required by machine owner/company/custodian.
- 3. Use the following table to record the results. After one item is complete, mark the appropriate box.
- **4.** Record the inspection results. If any inspection item is marked as "NO", the machine must be stopped and reinspected after repair is completed and the box marked "REPAIRED" shall be checked.

Select the appropriate inspection procedure based on the inspection type.

# APPENDIX 4: MAJOR MODIFICATION AND REPAIR RECORD

	Major	<b>Modification and Re</b>	epair Reco	rd	
Model					
Serial No.					
Date	Problem Description	Modification/Repair Item	Machine Status af- ter Change	Repairman's Company and Position	Repair- man Signature

#### Note:

- **1.** A major modification/repair is a modification/repair made to all or part of a machine that affects the stability, strength or performance of the machine.
- 2. Use this form to record major modifications/repairs made to the machine. Keep the form properly until the machine is taken out of service, or as requested by the machine owner/company.
- 3. The machine must be inspected and verified after major modifications/repairs, with the inspection items including but not limited to all items in the maintenance and inspection report.
- **4.** If the inspection result of each item in the Maintenance and Inspection Report is "YES", the "Machine Status after Modification/Repair" in the form will be "Good" and the machine can be used. If either inspection result is "NO", the machine must be re-inspected after the repair is completed until the machine is in "Good" condition before continuing to use the machine.

# **Always for Better Access Solutions**



# Hunan Sinoboom Intelligent Equipment Co., Ltd.

No.128, East Jinzhou Avenue, Ningxiang High-tech Industrial Park, Changsha, Hunan, China

0086-0731-87116222 (Sales) & 0086-0731-87116333 (Service)

sales@sinoboom.com

www.sinoboom.com

#### **North American Subsidiary Sinoboom North American LLC**

310 Mason Creek Drive unit #100 Katy, TX 77450, US

Tel: (281) 729-5425 E-mail: info@sinoboom.us

#### **Australia Subsidiary Sinoboom Intelligent Equipment Pty**

50/358 Clarendon St, South Melbourne VIC 3205, Australia E-mail: au@sinoboom.com

# **Europe Subsidiary**

Sinoboom B.V.

Nikkelstraat 26, NL-2984 AM Ridderkerk, The Netherlands Tel: +31 180 225 666 E-mail: info@sinoboom.eu

#### **Singapore Subsidiary** Star Access Solutions Pte. Ltd.

112 Robinson Road #03-01 Robinson 112 Singapore 068902

#### **Korea Subsidiary** Sinoboom Korea Co., Ltd.

95, Docheong-ro, Yeongtong-gu, Suwonsi, Gyeonggi-do, Republic of Korea Tel: 010-8310-8026 E-mail: ka1@sinoboom.com

#### **Poland Subsidiary** Sinoboom Poland sp. z o.o.

Ul. Bolesława Krzywoustego 74A 61-144 Poznań, Poland